


User Manual

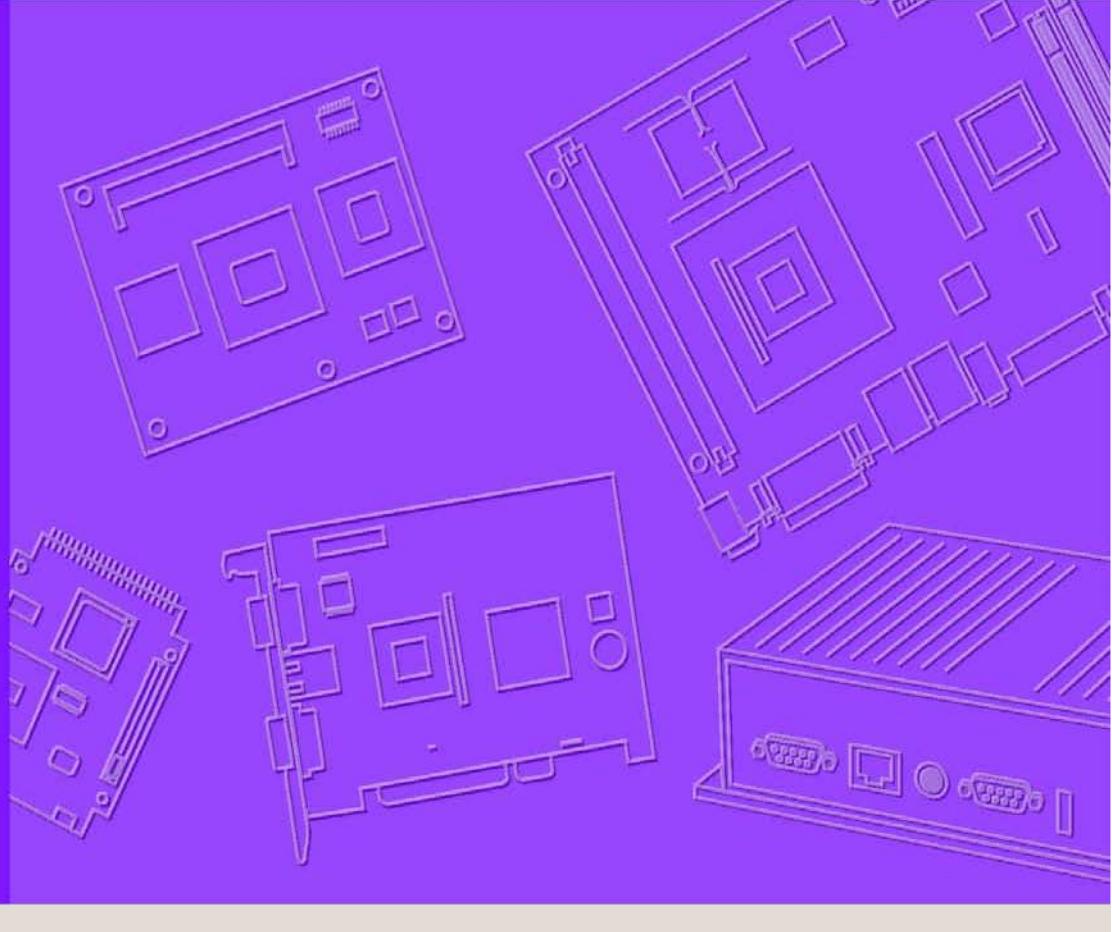

SUSI 4.0

**Secured & Unified Smart Interface
Software APIs**

Edition 4.0

April 19 2013

Part. No. **200EMBSA01**

Printed in Taiwan

Contents

| | |
|--|-----------|
| CONTENTS | 3 |
| LIST OF TABLES..... | 6 |
| 1 INTRODUCTION..... | 7 |
| 1.1 BENEFITS | 7 |
| 1.2 ENVIRONMENT REQUIREMENTS | 8 |
| 1.2.1 <i>Operating Systems</i> | 8 |
| 2 SUSI DEFINITION | 9 |
| 2.1 STATUS CODES | 9 |
| 2.2 ID | 13 |
| 2.3 ITEM ID | 17 |
| 3 SUSI API..... | 19 |
| 3.1 INITIALIZATION FUNCTIONS | 19 |
| 3.1.1 <i>SusiLibInitialize</i> | 19 |
| 3.1.2 <i>SusiLibUninitialize</i> | 19 |
| 3.2 INFORMATION FUNCTIONS | 21 |
| 3.2.1 <i>SusiBoardGetValue</i> | 21 |
| 3.2.2 <i>SusiBoardGetStringA</i> | 23 |
| 3.3 BACKLIGHT FUNCTIONS..... | 25 |
| 3.3.1 <i>SusiVgaGetCaps</i> | 25 |
| 3.3.2 <i>SusiVgaGetBacklightEnable</i> | 26 |
| 3.3.3 <i>SusiVgaSetBacklightEnable</i> | 26 |
| 3.3.4 <i>SusiVgaGetBacklightBrightness</i> | 27 |
| 3.3.5 <i>SusiVgaSetBacklightBrightness</i> | 27 |
| 3.3.6 <i>SusiVgaGetBacklightLevel</i> | 28 |
| 3.3.7 <i>SusiVgaSetBacklightLevel</i> | 28 |
| 3.3.8 <i>SusiVgaGetPolarity</i> | 29 |
| 3.3.9 <i>SusiVgaSetPolarity</i> | 30 |
| 3.3.10 <i>SusiVgaGetFrequency</i> | 30 |
| 3.3.11 <i>SusiVgaSetFrequency</i> | 31 |
| 3.3.12 <i>SusiVgaGetScreenEnable</i> | 31 |
| 3.3.13 <i>SusiVgaSetSrceenEnable</i> | 32 |
| 3.4 I2C FUNCTIONS..... | 33 |

| | | |
|--------|--------------------------------|----|
| 3.4.1 | <i>SusiI2CGetCaps</i> | 33 |
| 3.4.2 | <i>SusiI2CWriteReadCombine</i> | 34 |
| 3.4.3 | <i>SusiI2CReadTransfer</i> | 35 |
| 3.4.4 | <i>SusiI2CWriteTransfer</i> | 36 |
| 3.4.5 | <i>SusiI2CProbeDevice</i> | 37 |
| 3.4.6 | <i>SusiI2CGetFrequency</i> | 37 |
| 3.4.7 | <i>SusiI2CSetFrequency</i> | 38 |
| 3.5 | SMBUS FUNCTIONS | 39 |
| 3.5.1 | <i>SusiSMBReadByte</i> | 39 |
| 3.5.2 | <i>SusiSMBWriteByte</i> | 40 |
| 3.5.3 | <i>SusiSMBReadWord</i> | 40 |
| 3.5.4 | <i>SusiSMBWriteWord</i> | 41 |
| 3.5.5 | <i>SusiSMBReceiveByte</i> | 42 |
| 3.5.6 | <i>SusiSMBSendByte</i> | 43 |
| 3.5.7 | <i>SusiSMBReadQuick</i> | 44 |
| 3.5.8 | <i>SusiSMBWriteQuick</i> | 44 |
| 3.5.9 | <i>SusiSMBReadBlock</i> | 45 |
| 3.5.10 | <i>SusiSMBWriteBlock</i> | 46 |
| 3.5.11 | <i>SusiSMBI2CReadBlock</i> | 47 |
| 3.5.12 | <i>SusiSMBI2CWriteBlock</i> | 48 |
| 3.6 | WATCHDOG FUNCTIONS | 50 |
| 3.6.1 | <i>SusiWDogGetCaps</i> | 51 |
| 3.6.2 | <i>SusiWDogStart</i> | 52 |
| 3.6.3 | <i>SusiWDogStop</i> | 53 |
| 3.6.4 | <i>SusiWDogTrigger</i> | 53 |
| 3.6.5 | <i>SusiWDogSetCallBack</i> | 53 |
| 3.7 | GPIO FUNCTIONS | 55 |
| 3.7.1 | <i>SusiGPIOGetCaps</i> | 55 |
| 3.7.2 | <i>SusiGPIOGetDirection</i> | 56 |
| 3.7.3 | <i>SusiGPIOSetDirection</i> | 56 |
| 3.7.4 | <i>SusiGPIOGetLevel</i> | 57 |
| 3.7.5 | <i>SusiGPIOSetLevel</i> | 57 |
| 3.8 | SMART FAN FUNCTIONS | 59 |
| 3.8.1 | <i>SusiFanControlGetCaps</i> | 60 |
| 3.8.2 | <i>SusiFanControlGetConfig</i> | 61 |
| 3.8.3 | <i>SusiFanControlSetConfig</i> | 61 |
| 3.9 | STORAGE FUNCTIONS | 63 |
| 3.9.1 | <i>SusiStorageGetCaps</i> | 63 |
| 3.9.2 | <i>SusiStorageAreaRead</i> | 64 |

| | | |
|--------|---------------------------------------|----|
| 3.9.3 | <i>SusiStorageAreaWrite</i> | 64 |
| 3.9.4 | <i>SusiStorageAreaSetLock</i> | 65 |
| 3.9.5 | <i>SusiStorageAreaSetUnlock</i> | 66 |
| 3.10 | THERMAL PROTECTION FUNCTIONS | 67 |
| 3.10.1 | <i>SusiThermalProtectionGetCaps</i> | 68 |
| 3.10.2 | <i>SusiThermalProtectionSetConfig</i> | 69 |
| 3.10.3 | <i>SusiThermalProtectionGetConfig</i> | 69 |

List of Tables

| | | |
|----------|---|----|
| Table 1 | Board information value ID | 21 |
| Table 2 | Board voltage value ID | 21 |
| Table 3 | Board temperature value ID | 22 |
| Table 4 | Board fan speed value ID | 22 |
| Table 5 | Board support information value ID | 22 |
| Table 6 | Board information string ID | 23 |
| Table 7 | Backlight ID | 25 |
| Table 8 | Backlight Enable Values | 25 |
| Table 9 | VGA capabilities item Id | 26 |
| Table 10 | Brightness level range definition | 28 |
| Table 11 | Brightness polarity definition | 30 |
| Table 12 | Screen status definition | 32 |
| Table 13 | I ² C ID | 33 |
| Table 14 | I ² C command encode | 33 |
| Table 15 | I ² C capabilities item Id | 34 |
| Table 16 | SMBus ID | 39 |
| Table 17 | Watchdog ID | 51 |
| Table 18 | Watchdog capabilities item Id | 51 |
| Table 19 | Watchdog timer event type | 52 |
| Table 20 | GPIO ID | 55 |
| Table 21 | GPIO capabilities item Id | 55 |
| Table 22 | Fan control capabilities item Id | 60 |
| Table 23 | Control Support Flags | 60 |
| Table 24 | Auto Support Flags | 60 |
| Table 25 | Storage ID | 63 |
| Table 26 | Storage capabilities item Id | 63 |
| Table 27 | Storage Lock Status | 64 |
| Table 28 | Thermal Protection Event Type | 67 |
| Table 29 | Thermal Protection ID | 67 |
| Table 30 | Thermal Protection capabilities item Id | 68 |
| Table 31 | Thermal Protection Support Flags | 68 |

1 Introduction

SUSI – A Bridge to Simplify & Enhance H/W & Application Implementation Efficiency

When developers want to write an application that involves hardware access, they have to study the specifications to write the drivers. This is a time-consuming job and requires lots of expertise.

Advantech has done all the hard work for our customers with the release of a suite of Software APIs (Application Programming Interfaces), called **Secured & Unified Smart Interface** (SUSI).

SUSI provides not only the underlying drivers required but also a rich set of user-friendly, intelligent and integrated interfaces, which speeds development, enhances security and offers add-on value for Advantech platforms. SUSI plays the role of catalyst between developer and solution, and makes Advantech embedded platforms easier and simpler to adopt and operate with customer applications.

1.1 Benefits

✓ **Faster Time to Market**

SUSI's unified API helps developers write applications to control the hardware without knowing the hardware specs of the chipsets and driver architecture.

✓ **Reduced Project Effort**

When customers have their own devices connected to the onboard bus, they can either: study the data sheet and write the driver & API from scratch, or they can use SUSI to start the integration with a 50% head start. Developers can reference the sample program on the CD to see and learn more about the software development environment.

✓ **Enhances Hardware Platform Reliability**

SUSI provides a trusted custom ready solution which combines chipset and library function support, controlling application development through SUSI enhances reliability and brings peace of mind.

✓ **Flexible Upgrade Possibilities**

SUSI supports an easy upgrade solution for customers. Customers just need to install the new version SUSI that supports the new functions.

✓ **Backward compatibility**

Support SUSI 3.0, iManager 2.0 and EAPI 1.0 interface. Customers don't need to change any APIs in their applications.

1.2 Environment Requirements

1.2.1 Operating Systems

Windows XP Embedded

Windows XP Pro or Home Edition 32-bit

Windows 7 (x86 / x64)

WES7 (x86 / x64)

Windows 8 Desktop (x86 / x64)

Windows CE 5 / 6 / 7

Linux (Project based, request from your local FAE)

Android (Project based, request from your local FAE)

QNX (Project based, request from your local FAE)

VxWorks (Project based, request from your local FAE)

2 SUSI Definition

Susi4.h file includes the API declaration, constants and flags that are required for programming.

2.1 Status Codes

All SUSI API functions immediately return a status code from a common list of possible errors. Any function may return any of the defined status codes. See the Appendix for more detailed information.

| | |
|--|--------------|
| <code>#define SUSI_STATUS_NOT_INITIALIZED</code> | 0xFFFFFFFFFF |
|--|--------------|

Description

The SUSI API library is not yet or unsuccessfully initialized. SusiLibInitialize needs to be called prior to the first access of any other SUSI API function.

Actions

Call SusiLibInitialize.

| | |
|--|--------------|
| <code>#define SUSI_STATUS_INITIALIZED</code> | 0xFFFFFFFFFE |
|--|--------------|

Description

Library is initialized.

Actions

none.

| | |
|--|--------------|
| <code>#define SUSI_STATUS_ALLOC_ERROR</code> | 0xFFFFFFFFFD |
|--|--------------|

Description

Memory Allocation Error.

Actions

Free memory and try again.

| | |
|---|--------------|
| <code>#define SUSI_STATUS_DRIVER_TIMEOUT</code> | 0xFFFFFFFFFC |
|---|--------------|

Description

Time out in driver. This is Normally caused by hardware/software semaphore timeout.

Actions

Retry.

| | |
|--|--------------|
| <code>#define SUSI_STATUS_INVALID_PARAMETER</code> | 0xFFFFFFFFEF |
|--|--------------|

Description

One or more of the SUSI API function call parameters are out of the defined range.

Actions

Verify Function Parameters.

#define SUSI_STATUS_INVALID_BLOCK_ALIGNMENT 0xFFFFFEFE

Description

The Block Alignment is incorrect.

Actions

Use Inputs and Outputs to correctly select input and outputs.

#define SUSI_STATUS_INVALID_BLOCK_LENGTH 0xFFFFFEFD

Description

This means that the Block length is too long.

Actions

Use Alignment Capabilities information to correctly align write access.

#define SUSI_STATUS_INVALID_DIRECTION 0xFFFFFEFC

Description

The current Direction Argument attempts to set GPIOs to a unsupported directions. I.E. Setting GPI to Output.

Actions

Use Inputs and Outputs to correctly select input and outputs.

#define SUSI_STATUS_INVALID_BITMASK 0xFFFFFEFB

Description

The Bitmask Selects bits/GPIOs which are not supported for the current ID.

Actions

Use Inputs and Outputs to probe supported bits.

#define SUSI_STATUS_RUNNING 0xFFFFFEFA

Description

Watchdog timer already started.

Actions

Call SusiWDogStop, before retrying.

#define SUSI_STATUS_UNSUPPORTED 0xFFFFFCFF

Description

This function or ID is not supported at the actual hardware environment.

Actions

none.

```
#define SUSI_STATUS_NOT_FOUND 0xFFFFFBFF
```

Description

Selected device was not found

Actions

none.

```
#define SUSI_STATUS_TIMEOUT 0xFFFFFBFE
```

Description

Device has no response.

Actions

none.

```
#define SUSI_STATUS_BUSY_COLLISION 0xFFFFFBFD
```

Description

The selected device or ID is busy or a data collision was detected.

Actions

Retry.

```
#define SUSI_STATUS_READ_ERROR 0xFFFFFAFF
```

Description

An error was detected during a read operation.

Actions

Retry.

```
#define SUSI_STATUS_WRITE_ERROR 0xFFFFFAFE
```

Description

An error was detected during a write operation.

Actions

Retry.

```
#define SUSI_STATUS_MORE_DATA 0xFFFFF9FF
```

Description

The amount of available data exceeds the buffer size. Storage buffer overflow was prevented.

Read count was larger than the defined buffer length.

Actions

Either increase the buffer size or reduce the block length.

```
#define SUSI_STATUS_ERROR 0xFFFFF0FF
```

Description

Generic error message. No further error details are available.

Actions

none.

`#define SUSI_STATUS_SUCCESS`

0

Description

The operation was successful.

Actions

none.

2.2 ID

| | |
|-------------------------|--------------|
| #define SUSI_ID_UNKNOWN | 0xFFFFFFFFFF |
|-------------------------|--------------|

Description

Undefined/Unknown ID

| | |
|---|---|
| #define SUSI_ID_BOARD_MANUFACTURER_STR | 0 |
| #define SUSI_ID_BOARD_NAME_STR | 1 |
| #define SUSI_ID_BOARD_REVISION_STR | 2 |
| #define SUSI_ID_BOARD_SERIAL_STR | 3 |
| #define SUSI_ID_BOARD_BIOS_REVISION_STR | 4 |
| #define SUSI_ID_BOARD_HW_REVISION_STR | 5 |
| #define SUSI_ID_BOARD_PLATFORM_TYPE_STR | 6 |

Description

Board information string ID, use in SusiBoardGetStringA.

| | |
|--|------------|
| #define SUSI_ID_GET_SPEC_VERSION | 0x00000000 |
| #define SUSI_ID_BOARD_BOOT_COUNTER_VAL | 0x00000001 |
| #define SUSI_ID_BOARD_RUNNING_TIME_METER_VAL | 0x00000002 |
| #define SUSI_ID_BOARD_PNPID_VAL | 0x00000003 |
| #define SUSI_ID_BOARD_PLATFORM_REV_VAL | 0x00000004 |
| #define SUSI_ID_BOARD_DRIVER_VERSION_VAL | 0x00010000 |
| #define SUSI_ID_BOARD_LIB_VERSION_VAL | 0x00010001 |
| #define SUSI_ID_BOARD_FIRMWARE_VERSION_VAL | 0x00010002 |

Description

Board information value ID, use in SusiBoardGetValue.

| | |
|----------------------------------|------------|
| #define SUSI_ID_HWM_TEMP_CPU | 0x00020000 |
| #define SUSI_ID_HWM_TEMP_CHIPSET | 0x00020001 |
| #define SUSI_ID_HWM_TEMP_SYSTEM | 0x00020002 |
| #define SUSI_ID_HWM_TEMP_CPU2 | 0x00020003 |
| #define SUSI_ID_HWM_TEMP_OEM0 | 0x00020004 |
| #define SUSI_ID_HWM_TEMP_OEM1 | 0x00020005 |
| #define SUSI_ID_HWM_TEMP_OEM2 | 0x00020006 |
| #define SUSI_ID_HWM_TEMP_OEM3 | 0x00020007 |
| #define SUSI_ID_HWM_TEMP_OEM4 | 0x00020008 |
| #define SUSI_ID_HWM_TEMP_OEM5 | 0x00020009 |

Description

Board temperature value ID, use in SusiBoardGetValue.

| | |
|------------------------------------|------------|
| #define SUSI_ID_HWM_VOLTAGE_VCORE | 0x00021000 |
| #define SUSI_ID_HWM_VOLTAGE_VCORE2 | 0x00021001 |
| #define SUSI_ID_HWM_VOLTAGE_2V5 | 0x00021002 |
| #define SUSI_ID_HWM_VOLTAGE_3V3 | 0x00021003 |
| #define SUSI_ID_HWM_VOLTAGE_5V | 0x00021004 |
| #define SUSI_ID_HWM_VOLTAGE_12V | 0x00021005 |
| #define SUSI_ID_HWM_VOLTAGE_5VSB | 0x00021006 |
| #define SUSI_ID_HWM_VOLTAGE_3VSB | 0x00021007 |
| #define SUSI_ID_HWM_VOLTAGE_VBAT | 0x00021008 |
| #define SUSI_ID_HWM_VOLTAGE_5NV | 0x00021009 |
| #define SUSI_ID_HWM_VOLTAGE_12NV | 0x0002100A |
| #define SUSI_ID_HWM_VOLTAGE_VTT | 0x0002100B |
| #define SUSI_ID_HWM_VOLTAGE_24V | 0x0002100C |
| #define SUSI_ID_HWM_VOLTAGE_OEM0 | 0x00021010 |
| #define SUSI_ID_HWM_VOLTAGE_OEM1 | 0x00021011 |
| #define SUSI_ID_HWM_VOLTAGE_OEM2 | 0x00021012 |
| #define SUSI_ID_HWM_VOLTAGE_OEM3 | 0x00021013 |

Description

Board voltage value ID, use in SusiBoardGetValue.

| | |
|--------------------------------|------------|
| #define SUSI_ID_HWM_FAN_CPU | 0x00022000 |
| #define SUSI_ID_HWM_FAN_SYSTEM | 0x00022001 |
| #define SUSI_ID_HWM_FAN_CPU2 | 0x00022002 |
| #define SUSI_ID_HWM_FAN_OEM0 | 0x00022003 |
| #define SUSI_ID_HWM_FAN_OEM1 | 0x00022004 |
| #define SUSI_ID_HWM_FAN_OEM2 | 0x00022005 |
| #define SUSI_ID_HWM_FAN_OEM3 | 0x00022006 |
| #define SUSI_ID_HWM_FAN_OEM4 | 0x00022007 |
| #define SUSI_ID_HWM_FAN_OEM5 | 0x00022008 |
| #define SUSI_ID_HWM_FAN_OEM6 | 0x00022009 |

Description

Board fan speed value ID, use in SusiBoardGetValue and Smart Fan Functions.

| | |
|----------------------------------|------------|
| #define SUSI_ID_HWM_CURRENT_OEM0 | 0x00023000 |
| #define SUSI_ID_HWM_CURRENT_OEM1 | 0x00023001 |
| #define SUSI_ID_HWM_CURRENT_OEM2 | 0x00023002 |

Description

Board current value ID, use in SusiBoardGetValue.

| | |
|--|------------|
| <code>#define SUSI_ID_SMBUS_SUPPORTED</code> | 0x00030000 |
| <code>#define SUSI_ID_I2C_SUPPORTED</code> | 0x00030100 |

Description

Board supported information value ID, use in SusiBoardGetValue.

| | |
|---|---|
| <code>#define SUSI_ID_SMBUS_EXTERNAL</code> | 0 |
| <code>#define SUSI_ID_SMBUS_OEM0</code> | 1 |
| <code>#define SUSI_ID_SMBUS_OEM1</code> | 2 |
| <code>#define SUSI_ID_SMBUS_OEM2</code> | 3 |
| <code>#define SUSI_ID_SMBUS_OEM3</code> | 4 |

Description

SMBus device ID, use in SMBus Functions.

| | |
|---|---|
| <code>#define SUSI_ID_I2C_EXTERNAL</code> | 0 |
| <code>#define SUSI_ID_I2C_OEM0</code> | 1 |
| <code>#define SUSI_ID_I2C_OEM1</code> | 2 |
| <code>#define SUSI_ID_I2C_OEM2</code> | 3 |

Description

I²C device ID, use in I²C Functions.

| | |
|--|-------------------------|
| <code>#define SUSI_ID_GPIO(GPIO_NUM)</code> | (GPIO_NUM) |
| <code>#define SUSI_ID_GPIO_BANK(BANK_NUM)</code> | (0x00010000 + BANK_NUM) |

Description

GPIO device ID, use in GPIO Functions.

| | |
|--|---|
| <code>#define SUSI_ID_BACKLIGHT_1</code> | 0 |
| <code>#define SUSI_ID_BACKLIGHT_2</code> | 1 |
| <code>#define SUSI_ID_BACKLIGHT_3</code> | 2 |

Description

Backlight device ID, use in Backlight Functions.

| | |
|---|------------|
| <code>#define SUSI_ID_STORAGE_STD</code> | 0x00000000 |
| <code>#define SUSI_ID_STORAGE_OEM0</code> | 0x00000001 |
| <code>#define SUSI_ID_STORAGE_OEM1</code> | 0x00000002 |

Description

Storage device ID, use in Storage Functions.

| | |
|--|---|
| <code>#define SUSI_ID_THERMAL_PROTECT_1</code> | 0 |
|--|---|

| | |
|-----------------------------------|---|
| #define SUSI_ID_THERMAL_PROTECT_2 | 1 |
| #define SUSI_ID_THERMAL_PROTECT_3 | 2 |
| #define SUSI_ID_THERMAL_PROTECT_4 | 3 |

Description

Thermal protection device ID, use in Thermal Protection Functions

| | |
|----------------------------|---|
| #define SUSI_ID_WATCHDOG_1 | 0 |
| #define SUSI_ID_WATCHDOG_2 | 1 |
| #define SUSI_ID_WATCHDOG_3 | 2 |

Description

Watchdog device ID, use in Watchdog Functions.

2.3 Item ID

| | |
|---|------------|
| <code>#define SUSI_ID_I2C_MAXIMUM_BLOCK_LENGTH</code> | 0x00000000 |
|---|------------|

Description

Watchdog capabilities item ID, use in SusiI2CGetCaps.

| | |
|---|------------|
| <code>#define SUSI_ID_GPIO_INPUT_SUPPORT</code> | 0x00000000 |
|---|------------|

| | |
|--|------------|
| <code>#define SUSI_ID_GPIO_OUTPUT_SUPPORT</code> | 0x00000001 |
|--|------------|

Description

GPIO capabilities item ID, use in SusiGPIOGetCaps.

| | |
|---|------------|
| <code>#define SUSI_ID_VGA_BRIGHTNESS_MAXIMUM</code> | 0x00010000 |
|---|------------|

| | |
|---|------------|
| <code>#define SUSI_ID_VGA_BRIGHTNESS_MINIMUM</code> | 0x00010001 |
|---|------------|

Description

VGA capabilities item ID, use in SusiVgaGetCaps.

| | |
|---|------------|
| <code>#define SUSI_ID_STORAGE_TOTAL_SIZE</code> | 0x00000000 |
|---|------------|

| | |
|---|------------|
| <code>#define SUSI_ID_STORAGE_BLOCK_SIZE</code> | 0x00000001 |
|---|------------|

| | |
|--|------------|
| <code>#define SUSI_ID_STORAGE_LOCK_STATUS</code> | 0x00010000 |
|--|------------|

| | |
|--|------------|
| <code>#define SUSI_ID_STORAGE_PSW_MAX_LEN</code> | 0x00010000 |
|--|------------|

Description

Storage capabilities item ID, use in SusiStorageGetCaps.

| | |
|--|------------|
| <code>#define SUSI_ID_WDT_DELAY_MAXIMUM</code> | 0x00000001 |
|--|------------|

| | |
|--|------------|
| <code>#define SUSI_ID_WDT_DELAY_MINIMUM</code> | 0x00000002 |
|--|------------|

| | |
|--|------------|
| <code>#define SUSI_ID_WDT_EVENT_MAXIMUM</code> | 0x00000003 |
|--|------------|

| | |
|--|------------|
| <code>#define SUSI_ID_WDT_EVENT_MINIMUM</code> | 0x00000004 |
|--|------------|

| | |
|--|------------|
| <code>#define SUSI_ID_WDT_RESET_MAXIMUM</code> | 0x00000005 |
|--|------------|

| | |
|--|------------|
| <code>#define SUSI_ID_WDT_RESET_MINIMUM</code> | 0x00000006 |
|--|------------|

| | |
|---|------------|
| <code>#define SUSI_ID_WDT_UNIT_MINIMUM</code> | 0x0000000F |
|---|------------|

| | |
|---|------------|
| <code>#define SUSI_ID_WDT_DELAY_TIME</code> | 0x00010001 |
|---|------------|

| | |
|---|------------|
| <code>#define SUSI_ID_WDT_EVENT_TIME</code> | 0x00010002 |
|---|------------|

| | |
|---|------------|
| <code>#define SUSI_ID_WDT_RESET_TIME</code> | 0x00010003 |
|---|------------|

| | |
|---|------------|
| <code>#define SUSI_ID_WDT_EVENT_TYPE</code> | 0x00010004 |
|---|------------|

Description

Watchdog capabilities item ID, use in SusiWDogGetCaps.

| | |
|---|------------|
| <code>#define SUSI_ID_FC_CONTROL_SUPPORT_FLAGS</code> | 0x00000000 |
|---|------------|

| | |
|--|------------|
| <code>#define SUSI_ID_FC_AUTO_SUPPORT_FLAGS</code> | 0x00000001 |
|--|------------|

Description

Fan control capabilities item ID, use in SusiFanControlGetCaps.

| | |
|--|------------|
| #define SUSI_ID_TP_EVENT_SUPPORT_FLAGS | 0x00000000 |
| #define SUSI_ID_TP_EVENT_TRIGGER_MAXIMUM | 0x00000001 |
| #define SUSI_ID_TP_EVENT_TRIGGER_MINIMUM | 0x00000002 |
| #define SUSI_ID_TP_EVENT_CLEAR_MAXIMUM | 0x00000003 |
| #define SUSI_ID_TP_EVENT_CLEAR_MINIMUM | 0x00000004 |

Description

Thermal protection capabilities item ID, use in SusiThermalProtectionGetCaps.

3 SUSI API

The SUSI API provides the functions to control ADVANTECH platforms. SUSI API functions are based on a dynamic library. SUSI API can be implemented in various other programming languages.

3.1 Initialization Functions

3.1.1 SusiLibInitialize

```
uint32_t SUSI_API SusiLibInitialize(void)
```

Description:

General initialization of the SUSI API. Prior to calling any SUSI API function the library needs to be initialized by calling this function. The status code for all SUSI API function will be SUSI_STATUS_NOT_INITIALIZED unless this function is called.

Parameters:

None

Return Status Code:

| Condition | Return Value |
|----------------------|-----------------------------|
| Library initialized | SUSI_STATUS_INITIALIZED |
| Library initial fail | SUSI_STATUS_NOT_INITIALIZED |
| Success | SUSI_STATUS_SUCCESS |

3.1.2 SusiLibUninitialize

```
uint32_t SUSI_API SusiLibUninitialize(void)
```

Description:

General function to uninitialized the SUSI API library that should be called before program exit. In a dynamic library environment this function is not expected to replace the native uninitialized routines. It is expected that in this environments this function has no functionality.

Parameters:

None

Return Status Code:

| Condition | Return Value |
|-----------------------|-----------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| Success | SUSI_STATUS_SUCCESS |

3.2 Information Functions

3.2.1 SusiBoardGetValue

```
uint32_t SUSI_API SusiBoardGetValue(uint32_t Id, uint32_t *pValue)
```

Description:

Information about the hardware platform in value format.

Parameters:

Id

Selects target value. See **Table 1~**

Table 5.

pValue

Pointer to a buffer that receives the value's data.

Return Status Code:

| Condition | Return Value |
|-----------------------|-------------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| pValue==NULL | SUSI_STATUS_INVALID_PARAMETER |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Device unsupported | SUSI_STATUS_UNSUPPORTED |
| Success | SUSI_STATUS_SUCCESS |

Table 1 Board information value ID

| Id | Description | Unit |
|--------------------------------------|---------------------------|--------|
| SUSI_ID_GET_SPEC_VERSION | API Specification Version | |
| SUSI_ID_BOARD_BOOT_COUNTER_VAL | Boot Counter | 1 boot |
| SUSI_ID_BOARD_RUNNING_TIME_METER_VAL | Running Time Meter | 1 hour |
| SUSI_ID_BOARD_PNPID_VAL | Board Vendor PNPID | |
| SUSI_ID_BOARD_PLATFORM_REV_VAL | Platform revision | |
| SUSI_ID_BOARD_DRIVER_VERSION_VAL | Driver version | |
| SUSI_ID_BOARD_LIB_VERSION_VAL | Library version | |
| SUSI_ID_BOARD_FIRMWARE_VERSION_VAL | Firmware version | |

Table 2 Board voltage value ID

| Id | Description | Unit |
|----|-------------|------|
| | | |

| | | |
|----------------------------|-------------------------|------------|
| SUSI_ID_HWM_VOLTAGE_VCORE | CPU Core voltage | millivolts |
| SUSI_ID_HWM_VOLTAGE_VCORE2 | Second CPU Core voltage | millivolts |
| SUSI_ID_HWM_VOLTAGE_2V5 | 2.5V | millivolts |
| SUSI_ID_HWM_VOLTAGE_3V3 | 3.3V | millivolts |
| SUSI_ID_HWM_VOLTAGE_5V | 5V | millivolts |
| SUSI_ID_HWM_VOLTAGE_12V | 12V | millivolts |
| SUSI_ID_HWM_VOLTAGE_5VSB | 5V Standby | millivolts |
| SUSI_ID_HWM_VOLTAGE_3VSB | 3V Standby | millivolts |
| SUSI_ID_HWM_VOLTAGE_VBAT | CMOS Battery voltage | millivolts |
| SUSI_ID_HWM_VOLTAGE_5NV | -5V | millivolts |
| SUSI_ID_HWM_VOLTAGE_12NV | -12V | millivolts |
| SUSI_ID_HWM_VOLTAGE_VTT | DIMM voltage | millivolts |
| SUSI_ID_HWM_VOLTAGE_24V | 24V | millivolts |
| SUSI_ID_HWM_VOLTAGE_OEM0~3 | Other voltages | millivolts |

Table 3 Board temperature value ID

| Id | Description | Unit |
|--------------------------|---------------------|-------------|
| SUSI_ID_HWM_TEMP_CPU | CPU temperature | 0.1 Kelvins |
| SUSI_ID_HWM_TEMP_CHIPSET | Chipset temperature | 0.1 Kelvins |
| SUSI_ID_HWM_TEMP_SYSTEM | System temperature | 0.1 Kelvins |
| SUSI_ID_HWM_TEMP_CPU2 | CPU2 temperature | 0.1 Kelvins |
| SUSI_ID_HWM_TEMP_OEM0~5 | Other temperatures | 0.1 Kelvins |

Table 4 Board fan speed value ID

| Id | Description | Unit |
|------------------------|----------------------|-------------|
| SUSI_ID_HWM_FAN_CPU | CPU fan speed | RPM |
| SUSI_ID_HWM_FAN_SYSTEM | System fan speed | RPM |
| SUSI_ID_HWM_FAN_CPU2 | Second CPU fan speed | RPM |
| SUSI_ID_HWM_FAN_OEM0~6 | Other fans | RPM |

Table 5 Board support information value ID

| Id | Description |
|-------------------------|-------------------------------|
| | Mask flags: |
| | SUSI_SMBUS_EXTERNAL_SUPPORTED |
| SUSI_ID_SMBUS_SUPPORTED | SUSI_SMBUS_OEM0_SUPPORTED |
| | SUSI_SMBUS_OEM1_SUPPORTED |
| | SUSI_SMBUS_OEM2_SUPPORTED |

| | |
|-----------------------|-----------------------------|
| | SUSI_SMBUS_OEM3_SUPPORTED |
| | Mask flags: |
| SUSI_ID_I2C_SUPPORTED | SUSI_I2C_EXTERNAL_SUPPORTED |
| | SUSI_I2C_OEM0_SUPPORTED |
| | SUSI_I2C_OEM1_SUPPORTED |
| | SUSI_I2C_OEM2_SUPPORTED |

3.2.2 SusiBoardGetStringA

```
uint32_t SUSI_API SusiBoardGetStringA(uint32_t Id, char *pBuffer, uint32_t *pBufLen)
```

Description:

Text information about the hardware platform.

Parameters:

Id

Selects target string. See **Table 6**.

pBuffer

Pointer to a buffer that receives the value's data.

pBufLen

Pointer to a variable that specifies the size, in bytes, of the buffer pointed to by the pBuffer parameter. When the function returns, this variable contains the size of the data copied to pBuffer including the terminating null character.

Return Status Code:

| Condition | Return Value |
|--|-------------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| pBufLen==NULL | SUSI_STATUS_INVALID_PARAMETER |
| pBufLen!=NULL&&*pBufLen&&pBuffer==NULL | SUSI_STATUS_INVALID_PARAMETER |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Device unsupported | SUSI_STATUS_UNSUPPORTED |
| strlen + 1 > *pBufLen | SUSI_STATUS_MORE_DATA |
| Success | SUSI_STATUS_SUCCESS |

Table 6 Board information string ID

| Id | Description |
|--------------------------------|-------------------------|
| SUSI_ID_BOARD_MANUFACTURER_STR | Board Manufacturer Name |
| SUSI_ID_BOARD_NAME_STR | Board Name |

| | |
|---------------------------------|---------------------|
| SUSI_ID_BOARD_REVISION_STR | Board Revision |
| SUSI_ID_BOARD_SERIAL_STR | Board Serial Number |
| SUSI_ID_BOARD_BIOS_REVISION_STR | Board BIOS Revision |
| SUSI_ID_BOARD_HW_REVISION_STR | Hardware Revision |
| SUSI_ID_BOARD_PLATFORM_TYPE_STR | Platform type |

3.3 Backlight Functions

This function sub set facilitates backlight control for Integrated flat panel displays, typically LVDS.

Table 7 Backlight ID

| Id | Description |
|---------------------|------------------------------|
| SUSI_ID_BACKLIGHT_1 | Backlight Local Flat Panel 1 |
| SUSI_ID_BACKLIGHT_2 | Backlight Local Flat Panel 2 |
| SUSI_ID_BACKLIGHT_3 | Backlight Local Flat Panel 3 |

Table 8 Backlight Enable Values

| Name | Description |
|------------------------|--|
| SUSI_BACKLIGHT_SET_ON | Signifies that the Backlight be Enabled |
| SUSI_BACKLIGHT_SET_OFF | Signifies that the Backlight be Disabled |

3.3.1 SusiVgaGetCaps

```
uint32_t SUSI_API SusiVgaGetCaps(uint32_t Id, uint32_t ItemId, uint32_t *pValue);
```

Description:

Gets VGA capabilities.

Parameters:

Id

Selects target device. See **Table 7**.

ItemId

Selects target capability. See **Table 9**.

pValue

Pointer to a buffer that receives the target capability.

Return Status Code:

| Condition | Return Value |
|-----------------------|-------------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| pValue==NULL | SUSI_STATUS_INVALID_PARAMETER |
| Unknown Id or ItemId | SUSI_STATUS_UNSUPPORTED |
| Success | SUSI_STATUS_SUCCESS |

Table 9 VGA capabilities item Id

| Item Id | Description |
|--------------------------------|-------------------------|
| SUSI_ID_VGA_BRIGHTNESS_MAXIMUM | Maximum backlight value |
| SUSI_ID_VGA_BRIGHTNESS_MINIMUM | Minimum backlight value |

3.3.2 SusiVgaGetBacklightEnable

```
uint32_t SUSI_API SusiVgaGetBacklightEnable(uint32_t Id, uint32_t *pEnable)
```

Description:

Gets current Backlight Enable state for specified Flat Panel.

Parameters:**Id**

Selects target device. See **Table 7**.

pEnable

Pointer to a buffer that receives the current backlight enable state. See **Table 8**.

Return Status Code:

| Condition | Return Value |
|-----------------------|-------------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| pEnable==NULL | SUSI_STATUS_INVALID_PARAMETER |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Device unsupported | SUSI_STATUS_UNSUPPORTED |
| Success | SUSI_STATUS_SUCCESS |

3.3.3 SusiVgaSetBacklightEnable

```
uint32_t SUSI_API SusiVgaSetBacklightEnable(uint32_t Id, uint32_t Enable)
```

Description:

Enables or disable the backlight of the selected flat panel display

Parameters:**Id**

Selects target device. See **Table 7**.

Enable

Backlight Enable options. See **Table 8**.

Return Status Code:

| Condition | Return Value |
|-----------------------|-----------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Device unsupported | SUSI_STATUS_UNSUPPORTED |
| Success | SUSI_STATUS_SUCCESS |

3.3.4 SusiVgaGetBacklightBrightness

```
uint32_t SUSI_API SusiVgaGetBacklightBrightness(uint32_t Id, uint32_t *pBright)
```

Description:

Reads the current brightness of the selected flat panel display.

Parameters:**Id**

Selects target device. See **Table 7**.

pBright

Pointer to a buffer that receives the current backlight brightness value.

Return Status Code:

| Condition | Return Value |
|-----------------------|-------------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| pBright==NULL | SUSI_STATUS_INVALID_PARAMETER |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Device unsupported | SUSI_STATUS_UNSUPPORTED |
| Success | SUSI_STATUS_SUCCESS |

3.3.5 SusiVgaSetBacklightBrightness

```
uint32_t SUSI_API SusiVgaSetBacklightBrightness(uint32_t Id, uint32_t Bright)
```

Description:

Reads the current brightness of the selected flat panel display.

Parameters:**Id**

Selects target device. See **Table 7**.

Bright

Backlight Brightness value.

Return Status Code:

| Condition | Return Value |
|--|-------------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| Bright > MAX value Bright < MIN value | SUSI_STATUS_INVALID_PARAMETER |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Device unsupported | SUSI_STATUS_UNSUPPORTED |
| Success | SUSI_STATUS_SUCCESS |

3.3.6 SusiVgaGetBacklightLevel

```
uint32_t SUSI_API SusiVgaGetBacklightLevel(uint32_t Id, uint32_t *pLevel)
```

Description:

Reads the current brightness level of the selected flat panel display.

Parameters:

Id

Selects target device. See **Table 7**.

pLevel

Pointer to a buffer that receives the current backlight brightness level. See **Table 10**.

Return Status Code:

| Condition | Return Value |
|-----------------------|-------------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| pLevel==NULL | SUSI_STATUS_INVALID_PARAMETER |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Device unsupported | SUSI_STATUS_UNSUPPORTED |
| Success | SUSI_STATUS_SUCCESS |

Table 10 Brightness level range definition

| Name | Description |
|------------------------------|------------------------------|
| SUSI_BACKLIGHT_LEVEL_MAXIMUM | Maximum backlight level is 9 |
| SUSI_BACKLIGHT_LEVEL_MINIMUM | Minimum backlight level is 0 |

3.3.7 SusiVgaSetBacklightLevel

```
uint32_t SUSI_API SusiVgaSetBacklightLevel(uint32_t Id, uint32_t Level)
```

Description:

Sets the brightness level of the selected flat panel display.

Parameters:**Id**

Selects target device. See **Table 7**.

Level

Backlight Brightness level. See **Table 10**.

Return Status Code:

| Condition | Return Value |
|------------------------------------|-------------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| Level>SUSI_BACKLIGHT_LEVEL_MAXIMUM | SUSI_STATUS_INVALID_PARAMETER |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Device unsupported | SUSI_STATUS_UNSUPPORTED |
| Success | SUSI_STATUS_SUCCESS |

3.3.8 SusiVgaGetPolarity

```
uint32_t SUSI_API SusiVgaGetPolarity(uint32_t Id, uint32_t *pPolarity)
```

Description:

Reads the current backlight polarity of the selected flat panel display.

Parameters:**Id**

Selects target device. See **Table 7**.

pPolarity

Pointer to a buffer that receives the current backlight polarity. See **Table 11**.

Return Status Code:

| Condition | Return Value |
|-----------------------|-------------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| pPolarity==NULL | SUSI_STATUS_INVALID_PARAMETER |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Success | SUSI_STATUS_SUCCESS |

Table 11 Brightness polarity definition

| Name | Description |
|-----------------------------|-------------------------------|
| SUSI_BACKLIGHT_POLARITY_ON | Backlight signal polarity ON |
| SUSI_BACKLIGHT_POLARITY_OFF | Backlight signal polarity OFF |

3.3.9 SusiVgaSetPolarity

```
uint32_t SUSI_API SusiVgaSetPolarity(uint32_t Id, uint32_t Polarity)
```

Description:

Sets the polarity of the selected flat panel display.

Parameters:**Id**

Selects target device. See **Table 7**.

Polarity

Polarity state. See **Table 11**.

Return Status Code:

| Condition | Return Value |
|-----------------------|-----------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Success | SUSI_STATUS_SUCCESS |

3.3.10 SusiVgaGetFrequency

```
uint32_t SUSI_API SusiVgaGetFrequency(uint32_t Id, uint32_t *pFrequency)
```

Description:

Reads the current backlight frequency of the selected flat panel display.

Parameters:**Id**

Selects target device. See **Table 7**.

pFrequency

Pointer to a buffer that receives the current backlight frequency. (Unit: Hz)

Return Status Code:

| Condition | Return Value |
|-----------|--------------|
| | |

| | |
|-----------------------|-------------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| pFrequency==NULL | SUSI_STATUS_INVALID_PARAMETER |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Device unsupported | SUSI_STATUS_UNSUPPORTED |
| Success | SUSI_STATUS_SUCCESS |

3.3.11 SusiVgaSetFrequency

`uint32_t SUSI_API SusiVgaSetFrequency(uint32_t Id, uint32_t Frequency)`

Description:

Sets the frequency of the selected flat panel display.

Parameters:

Id

Selects target device. See **Table 7**.

Polarity

Frequency value. (Unit: Hz)

Return Status Code:

| Condition | Return Value |
|-----------------------|-----------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Device unsupported | SUSI_STATUS_UNSUPPORTED |
| Success | SUSI_STATUS_SUCCESS |

3.3.12 SusiVgaGetScreenEnable

`uint32_t SUSI_API SusiVgaGetScreenEnable(uint32_t Id, uint32_t *pEnable)`

Description:

Reads the current screen status of the selected device

Parameters:

Id

Selects target device.

pEnable

Pointer to a buffer that receives the current screen state. See **Table 12**.

Return Status Code:

| Condition | Return Value |
|-----------------------|-------------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| pEnable==NULL | SUSI_STATUS_INVALID_PARAMETER |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Device unsupported | SUSI_STATUS_UNSUPPORTED |
| Success | SUSI_STATUS_SUCCESS |

Table 12 Screen status definition

| Name | Description |
|-----------------|-------------|
| SUSI_SCREEN_ON | Screen ON |
| SUSI_SCREEN_OFF | Screen OFF |

3.3.13 SusiVgaSetSrceenEnable

```
uint32_t SUSI_API SusiVgaSetScreenEnable(uint32_t Id, uint32_t Enable)
```

Description:

Sets the screen state of the selected device.

Parameters:**Id**

Selects target device.

Enable

Screen state. See **Table 12**.

Return Status Code:

| Condition | Return Value |
|-----------------------|-----------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Device unsupported | SUSI_STATUS_UNSUPPORTED |
| Success | SUSI_STATUS_SUCCESS |

3.4 I²C Functions

I²C APIs supports standard 7 and 10 bits slave address mode. I²C API also supports word command, it need encode before set to parameter, see Table 14

Table 13 I²C ID

| Id | Description |
|----------------------|-------------------------------------|
| SUSI_ID_I2C_EXTERNAL | Main I ² C host device |
| SUSI_ID_I2C_OEM0~2 | Other I ² C host devices |

Table 14 I²C command encode

| Type | Description |
|------------------|---|
| Standard command | Byte command |
| Extend command | Word command 0x8000000000 Ex. 0x8000FABC |
| No command | 0x4000xxxx, ignore command parameter |

3.4.1 SusiI2CGetCaps

```
uint32_t SUSI_API SusiI2CGetCaps(uint32_t Id, uint32_t ItemId, uint32_t *pValue)
```

Description:

Gets I²C capabilities.

Parameters:

Id

Selects target device. See **Table 13**.

ItemId

Selects target capability. See **Table 15**.

pValue

Pointer to a buffer that receives the target capability.

Return Status Code:

| Condition | Return Value |
|-----------------------|-------------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| pValue==NULL | SUSI_STATUS_INVALID_PARAMETER |
| Unknown Id or ItemId | SUSI_STATUS_UNSUPPORTED |
| Success | SUSI_STATUS_SUCCESS |

Table 15 I²C capabilities item Id

| Item Id | Description |
|----------------------------------|---------------------------------------|
| SUSI_ID_I2C_MAXIMUM_BLOCK_LENGTH | I ² C maximum block length |

3.4.2 SusiI2CWriteReadCombine

```
uint32_t SUSI_API SusiI2CWriteReadCombine(uint32_t Id, uint8_t Addr,  
uint8_t *pWBuffer, uint32_t WriteLen, uint8_t *pRBuffer, uint32_t ReadLen)
```

Description:

Universal function for read and write operations to the I²C bus.

Parameters:**Id**

Selects target device. See **Table 15**.

Addr

First byte of I²C device address. 7-bit address only.

pWBuffer

Pointer to a buffer containing the data to be transferred. This parameter can be NULL if the data is not required.

WriteLen

Size in bytes of the information pointed to by the pWBuffer parameter. If pWBuffer is NULL this will be ignored.

pRBuffer

Pointer to a buffer that receives the read data. This parameter can be NULL if the data is not required.

ReadLen

Size in bytes of the buffer pointed to by the pRBuffer parameter. If pRBuffer is NULL this will be ignored.

Return Status Code:

| Condition | Return Value |
|--------------------------------|-------------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| (WriteLen>1)&&(pWBuffer==NULL) | SUSI_STATUS_INVALID_PARAMETER |
| (RBufLen>1)&&(pRBuffer==NULL) | SUSI_STATUS_INVALID_PARAMETER |
| (WriteLen==0)&&(RBufLen==0) | SUSI_STATUS_INVALID_PARAMETER |

| | |
|-----------------------------------|----------------------------|
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Bus Busy SDA/SDC low | SUSI_STATUS_BUSY_COLLISION |
| Arbitration Error/Collision Error | |
| On Write 1 write cycle | SUSI_STATUS_BUSY_COLLISION |
| SDA Remains low | |
| Time-out due to clock stretching | SUSI_STATUS_TIMEOUT |
| Address Non-ACK | SUSI_STATUS_NOT_FOUND |
| Write Non-ACK | SUSI_STATUS_WRITE_ERROR |
| Success | SUSI_STATUS_SUCCESS |

3.4.3 SusiI2CReadTransfer

```
uint32_t SUSI_API SusiI2CReadTransfer(uint32_t Id, uint32_t Addr, uint32_t Cmd,
uint8_t *pBuffer, uint32_t ReadLen)
```

Description:

Reads from a specific register in the selected I²C device. Reads from I²C device at the I²C address Addr the amount of ReadLen bytes to the buffer pBuffer while using the device specific command Cmd. Depending on the addressed I²C device Cmd can be a specific command or a byte offset.

Parameters:

Id

Selects target device. See **Table 15**.

Addr

Encoded 7/10 Bit I²C Device Address.

Cmd

Encoded I²C Device Command / Index. See **Table 14**.

pBuffer

Pointer to a buffer that receives the read data.

ReadLen

Size in bytes of the buffer pointed to by the pBuffer parameter.

Return Status Code:

| Condition | Return Value |
|-----------------------------|-------------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| pBuffer==NULL ReadLen==0 | SUSI_STATUS_INVALID_PARAMETER |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Bus Busy SDA/SDC low | SUSI_STATUS_BUSY_COLLISION |

| | |
|-----------------------------------|----------------------------|
| Arbitration Error/Collision Error | |
| On Write 1 write cycle | SUSI_STATUS_BUSY_COLLISION |
| SDA Remains low | |
| Time-out due to clock stretching | |
| Address Non-ACK | SUSI_STATUS_TIMEOUT |
| Write Non-ACK | SUSI_STATUS_NOT_FOUND |
| Success | SUSI_STATUS_WRITE_ERROR |
| Success | |

3.4.4 Susi2CWriteTransfer

```
uint32_t SUSI_API Susi2CWriteTransfer(uint32_t Id, uint32_t Addr, uint32_t Cmd,
uint8_t *pBuffer, uint32_t ByteCnt)
```

Description:

Write to a specific register in the selected I²C device. Writes to an I²C device at the I²C address Addr the amount of ByteCnt bytes from the buffer *pBuffer while using the device specific command Cmd. Depending on the addressed I²C device Cmd can be a specific command or a byte offset

Parameters:

Id

Selects target device. See **Table 15**.

Addr

Encoded 7/10 Bit I²C Device Address.

Cmd

Encoded I²C Device Command / Index. See **Table 14**.

pBuffer

Pointer to a buffer that receives the write data.

ByteCnt

Size in bytes of the buffer pointed to by the pBuffer parameter.

Return Status Code:

| Condition | Return Value |
|-----------------------------|----------------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| pBuffer==NULL ByteCnt==0 | SUSI_STATUS_INVALID_PARAMETER |
| ByteCnt > MaxLength | SUSI_STATUS_INVALID_BLOCK_LENGTH |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Bus Busy SDA/SDC low | SUSI_STATUS_BUSY_COLLISION |

| | |
|-----------------------------------|----------------------------|
| Arbitration Error/Collision Error | |
| On Write 1 write cycle | SUSI_STATUS_BUSY_COLLISION |
| SDA Remains low | |
| <hr/> | |
| Time-out due to clock stretching | SUSI_STATUS_TIMEOUT |
| Address Non-ACK | SUSI_STATUS_NOT_FOUND |
| Write Non-ACK | SUSI_STATUS_WRITE_ERROR |
| Success | SUSI_STATUS_SUCCESS |

3.4.5 Susil2CProbeDevice

`uint32_t SUSI_API Susil2CProbeDevice(uint32_t Id, uint32_t Addr)`

Description:

Probes I²C address to test I²C device present.

Parameters:

Id

Selects target device. See **Table 15**.

Addr

Encoded 7/10 Bit I²C Device Address.

Return Status Code:

| Condition | Return Value |
|-----------------------------------|-----------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Bus Busy SDA/SDC low | SUSI_STATUS_BUSY_COLLISION |
| <hr/> | |
| Arbitration Error/Collision Error | |
| On Write 1 write cycle | SUSI_STATUS_BUSY_COLLISION |
| SDA Remains low | |
| <hr/> | |
| Time-out due to clock stretching | SUSI_STATUS_TIMEOUT |
| Address Non-ACK | SUSI_STATUS_NOT_FOUND |
| Write Non-ACK | SUSI_STATUS_WRITE_ERROR |
| Success | SUSI_STATUS_SUCCESS |

3.4.6 Susil2CGetFrequency

`uint32_t SUSI_API Susil2CGetFrequency(uint32_t Id, uint32_t *pFreq)`

Description:

Get I²C clock frequency.

Parameters:

Id

Selects target device. See **Table 15**.

pFreq

Pointer to a buffer that receives the I²C clock frequency value. (Unit: Hz)

Return Status Code:

| Condition | Return Value |
|-----------------------|-------------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Device unsupported | SUSI_STATUS_UNSUPPORTED |
| pFreq == NULL | SUSI_STATUS_INVALID_PARAMETER |
| Success | SUSI_STATUS_SUCCESS |

3.4.7 SusiI2CSetFrequency

```
uint32_t SUSI_API SusiI2CSetFrequency(uint32_t Id, uint32_t Freq)
```

Description:

Set I²C clock frequency.

Parameters:

Id

Selects target device. See **Table 15**.

Freq

I²C clock frequency value. (Unit: Hz)

Return Status Code:

| Condition | Return Value |
|-----------------------|-----------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Device unsupported | SUSI_STATUS_UNSUPPORTED |
| Success | SUSI_STATUS_SUCCESS |

3.5 SMBus Functions

SMBus is the System Management Bus defined by Intel® Corporation in 1995. It is used in personal computers and servers for low-speed system management communications.

Table 16 SMBus ID

| Id | Description |
|------------------------|--------------------------|
| SUSI_ID_SMBUS_EXTERNAL | Main SMBus host device |
| SUSI_ID_SMBUS_OEM0~3 | Other SMBus host devices |

3.5.1 SusiSMBReadByte

```
uint32_t SUSI_API SusiSMBReadByte(uint32_t Id, uint8_t Addr, uint8_t Cmd, uint8_t  
*pBuffer)
```

Description:

Read a byte of data from the target slave device in the SMBus.

Parameters:

Id

Selects target device. See **Table 16**.

Addr

Specifies the 8-bit device address, ranging from 0x00 to 0xFF. Whether to give a 1 (read) or 0 (write) to the LSB of slave address could be ignored.

Cmd

Specifies the offset or command of the device register to read data from.

pBuffer

Pointer to a variable in which the function reads the byte data.

Return Status Code:

| Condition | Return Value |
|-----------------------------------|-------------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| pBuffer==NULL | SUSI_STATUS_INVALID_PARAMETER |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Bus Busy SDA/SDC low | SUSI_STATUS_BUSY_COLLISION |
| Arbitration Error/Collision Error | |
| On Write 1 write cycle | SUSI_STATUS_BUSY_COLLISION |
| SDA Remains low | |

| | |
|----------------------------------|-------------------------|
| Time-out due to clock stretching | SUSI_STATUS_TIMEOUT |
| Address Non-ACK | SUSI_STATUS_NOT_FOUND |
| Write Non-ACK | SUSI_STATUS_WRITE_ERROR |
| Success | SUSI_STATUS_SUCCESS |

3.5.2 SusiSMBWriteByte

```
uint32_t SUSI_API SusiSMBWriteByte(uint32_t Id, uint8_t Addr, uint8_t Cmd, uint8_t Data)
```

Description:

Write a byte of data to the target slave device in the SMBus.

Parameters:

Id

Selects target device. See **Table 16**.

Addr

Specifies the 8-bit device address, ranging from 0x00 to 0xFF. Whether to give a 1 (read) or 0 (write) to the LSB of slave address could be ignored.

Cmd

Specifies the offset or command of the device register to write data to.

Data

Specifies the byte data to be written.

Return Status Code:

| Condition | Return Value |
|-----------------------------------|-----------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Bus Busy SDA/SDC low | SUSI_STATUS_BUSY_COLLISION |
| Arbitration Error/Collision Error | |
| On Write 1 write cycle | SUSI_STATUS_BUSY_COLLISION |
| SDA Remains low | |
| Time-out due to clock stretching | SUSI_STATUS_TIMEOUT |
| Address Non-ACK | SUSI_STATUS_NOT_FOUND |
| Write Non-ACK | SUSI_STATUS_WRITE_ERROR |
| Success | SUSI_STATUS_SUCCESS |

3.5.3 SusiSMBReadWord

```
uint32_t SUSI_API SusiSMBReadWord(uint32_t Id, uint8_t Addr, uint8_t Cmd, uint16_t
```

```
*pBuffer)
```

Description:

Read a word of data from the target slave device in the SMBus.

Parameters:

Id

Selects target device. See **Table 16**.

Addr

Specifies the 8-bit device address, ranging from 0x00 to 0xFF. Whether to give a 1 (read) or 0 (write) to the LSB of slave address could be ignored.

Cmd

Specifies the offset or command of the device register to read data from.

pBuffer

Pointer to a variable in which the function reads the word data.

Return Status Code:

| Condition | Return Value |
|-----------------------------------|-------------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| pBuffer==NULL | SUSI_STATUS_INVALID_PARAMETER |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Bus Busy SDA/SDC low | SUSI_STATUS_BUSY_COLLISION |
| Arbitration Error/Collision Error | |
| On Write 1 write cycle | SUSI_STATUS_BUSY_COLLISION |
| SDA Remains low | |
| Time-out due to clock stretching | SUSI_STATUS_TIMEOUT |
| Address Non-ACK | SUSI_STATUS_NOT_FOUND |
| Write Non-ACK | SUSI_STATUS_WRITE_ERROR |
| Success | SUSI_STATUS_SUCCESS |

3.5.4 SusiSMBWriteWord

```
uint32_t SUSI_API SusiSMBWriteWord(uint32_t Id, uint8_t Addr, uint8_t Cmd,  
uint16_t Data)
```

Description:

Write a word of data to the target slave device in the SMBus.

Parameters:

Id

Selects target device. See **Table 16**.

Addr

Specifies the 8-bit device address, ranging from 0x00 to 0xFF. Whether to give a 1 (read) or 0 (write) to the LSB of slave address could be ignored.

Cmd

Specifies the offset or command of the device register to write data to.

Data

Specifies the word data to be written.

Return Status Code:

| Condition | Return Value |
|-----------------------------------|-----------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Bus Busy SDA/SDC low | SUSI_STATUS_BUSY_COLLISION |
| Arbitration Error/Collision Error | |
| On Write 1 write cycle | SUSI_STATUS_BUSY_COLLISION |
| SDA Remains low | |
| Time-out due to clock stretching | SUSI_STATUS_TIMEOUT |
| Address Non-ACK | SUSI_STATUS_NOT_FOUND |
| Write Non-ACK | SUSI_STATUS_WRITE_ERROR |
| Success | SUSI_STATUS_SUCCESS |

3.5.5 SusiSMBReceiveByte

```
uint32_t SUSI_API SusiSMBReceiveByte(uint32_t Id, uint8_t Addr, uint8_t *pBuffer)
```

Description:

Receive a byte of data from the target slave device in the SMBus.

Parameters:**Id**

Selects target device. See **Table 16**.

Addr

Specifies the 8-bit device address, ranging from 0x00 to 0xFF. Whether to give a 1 (read) or 0 (write) to the LSB of slave address could be ignored.

pBuffer

Pointer to a variable in which the function receive the byte data.

Return Status Code:

| Condition | Return Value |
|-----------------------------------|-------------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| pBuffer==NULL | SUSI_STATUS_INVALID_PARAMETER |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Bus Busy SDA/SDC low | SUSI_STATUS_BUSY_COLLISION |
| Arbitration Error/Collision Error | |
| On Write 1 write cycle | SUSI_STATUS_BUSY_COLLISION |
| SDA Remains low | |
| Time-out due to clock stretching | SUSI_STATUS_TIMEOUT |
| Address Non-ACK | SUSI_STATUS_NOT_FOUND |
| Write Non-ACK | SUSI_STATUS_WRITE_ERROR |
| Success | SUSI_STATUS_SUCCESS |

3.5.6 SusiSMBSendByte

```
uint32_t SUSI_API SusiSMBSendByte(uint32_t Id, uint8_t Addr, uint8_t Cmd, uint8_t Data)
```

Description:

Send a byte of data to the target slave device in the SMBus.

Parameters:**Id**

Selects target device. See **Table 16**.

Addr

Specifies the 8-bit device address, ranging from 0x00 to 0xFF. Whether to give a 1 (read) or 0 (write) to the LSB of slave address could be ignored.

Data

Specifies the word data to be sent.

Return Status Code:

| Condition | Return Value |
|-----------------------------------|-----------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Bus Busy SDA/SDC low | SUSI_STATUS_BUSY_COLLISION |
| Arbitration Error/Collision Error | |
| On Write 1 write cycle | SUSI_STATUS_BUSY_COLLISION |
| SDA Remains low | |

| | |
|----------------------------------|-------------------------|
| Time-out due to clock stretching | SUSI_STATUS_TIMEOUT |
| Address Non-ACK | SUSI_STATUS_NOT_FOUND |
| Write Non-ACK | SUSI_STATUS_WRITE_ERROR |
| Success | SUSI_STATUS_SUCCESS |

3.5.7 SusiSMBReadQuick

```
uint32_t SUSI_API SusiSMBReadQuick(uint32_t Id, uint8_t Addr)
```

Description:

Turn SMBus device function off (on) or disable (enable) a specific device mode..

Parameters:

Id

Selects target device. See **Table 16**.

Addr

Specifies the 8-bit device address, ranging from 0x00 to 0xFF. Whether to give a 1 (read) or 0 (write) to the LSB of slave address could be ignored.

Return Status Code:

| Condition | Return Value |
|-----------------------------------|-----------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Bus Busy SDA/SDC low | SUSI_STATUS_BUSY_COLLISION |
| Arbitration Error/Collision Error | |
| On Write 1 write cycle | SUSI_STATUS_BUSY_COLLISION |
| SDA Remains low | |
| Time-out due to clock stretching | SUSI_STATUS_TIMEOUT |
| Address Non-ACK | SUSI_STATUS_NOT_FOUND |
| Success | SUSI_STATUS_SUCCESS |

3.5.8 SusiSMBWriteQuick

```
uint32_t SUSI_API SusiSMBWriteQuick(uint32_t Id, uint8_t Addr)
```

Description:

Turn SMBus device function off (on) or disable (enable) a specific device mode..

Parameters:

Id

Selects target device. See **Table 16**.

Addr

Specifies the 8-bit device address, ranging from 0x00 to 0xFF. Whether to give a 1 (read) or 0 (write) to the LSB of slave address could be ignored.

Return Status Code:

| Condition | Return Value |
|-----------------------------------|-----------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Bus Busy SDA/SDC low | SUSI_STATUS_BUSY_COLLISION |
| Arbitration Error/Collision Error | |
| On Write 1 write cycle | SUSI_STATUS_BUSY_COLLISION |
| SDA Remains low | |
| Time-out due to clock stretching | SUSI_STATUS_TIMEOUT |
| Address Non-ACK | SUSI_STATUS_NOT_FOUND |
| Success | SUSI_STATUS_SUCCESS |

3.5.9 SusiSMBReadBlock

```
uint32_t SUSI_API SusiSMBReadBlock(uint32_t Id, uint8_t Addr, uint8_t Cmd,
uint8_t *pBuffer, uint32_t *pLength)
```

Description:

Read multi-data from the target slave device in the SMBus.

Parameters:**Id**

Selects target device. See **Table 16**.

Addr

Specifies the 8-bit device address, ranging from 0x00 to 0xFF. Whether to give a 1 (read) or 0 (write) to the LSB of slave address could be ignored.

Cmd

Specifies the offset or command of the device register to read data from.

pBuffer

Pointer to a byte array in which the function reads the block data.

pLength

Pointer to a byte in which specifies the number of bytes to be read and also return succeed bytes.

Return Status Code:

| Condition | Return Value |
|-----------------------------------|-------------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| pBuffer==NULL | SUSI_STATUS_INVALID_PARAMETER |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Bus Busy SDA/SDC low | SUSI_STATUS_BUSY_COLLISION |
| Arbitration Error/Collision Error | |
| On Write 1 write cycle | SUSI_STATUS_BUSY_COLLISION |
| SDA Remains low | |
| Time-out due to clock stretching | SUSI_STATUS_TIMEOUT |
| Address Non-ACK | SUSI_STATUS_NOT_FOUND |
| Write Non-ACK | SUSI_STATUS_WRITE_ERROR |
| Success | SUSI_STATUS_SUCCESS |

3.5.10 SusiSMBWriteBlock

```
uint32_t SUSI_API SusiSMBWriteBlock(uint32_t Id, uint8_t Addr, uint8_t Cmd,  
                                       uint8_t *pBuffer, uint32_t Length)
```

Description:

Write multi-data from the target slave device in the SMBus.

Parameters:**Id**

Selects target device. See **Table 16**.

Addr

Specifies the 8-bit device address, ranging from 0x00 to 0xFF. Whether to give a 1 (read) or 0 (write) to the LSB of slave address could be ignored.

Cmd

Specifies the offset or command of the device register to write data to.

pBuffer

Pointer to a byte array in which the function writes the block data.

Length

Specifies the number of bytes to be write.

Return Status Code:

| Condition | Return Value |
|-----------|--------------|
|-----------|--------------|

| | |
|-----------------------------------|-------------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| pBuffer==NULL | SUSI_STATUS_INVALID_PARAMETER |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Bus Busy SDA/SDC low | SUSI_STATUS_BUSY_COLLISION |
| Arbitration Error/Collision Error | |
| On Write 1 write cycle | SUSI_STATUS_BUSY_COLLISION |
| SDA Remains low | |
| Time-out due to clock stretching | SUSI_STATUS_TIMEOUT |
| Address Non-ACK | SUSI_STATUS_NOT_FOUND |
| Write Non-ACK | SUSI_STATUS_WRITE_ERROR |
| Success | SUSI_STATUS_SUCCESS |

3.5.11 SusiSMBI2CReadBlock

```
uint32_t SUSI_API SusiSMBI2CReadBlock(uint32_t Id, uint8_t Addr, uint8_t Cmd,
uint8_t *pBuffer, uint32_t *pLength)
```

Description:

Read multi-data using I²C block protocol from the target slave device in the SMBus.

Parameters:

Id

Selects target device. See **Table 16**.

Addr

Specifies the 8-bit device address, ranging from 0x00 to 0xFF. Whether to give a 1 (read) or 0 (write) to the LSB of slave address could be ignored.

Cmd

Specifies the offset or command of the device register to read data from.

pBuffer

Pointer to a byte array in which the function reads the block data.

pLength

Pointer to a byte in which specifies the number of bytes to be read and also return succeed bytes.

Return Status Code:

| Condition | Return Value |
|-----------------------|-------------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| pBuffer==NULL | SUSI_STATUS_INVALID_PARAMETER |

| | |
|-----------------------------------|----------------------------|
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Device unsupported | SUSI_STATUS_UNSUPPORTED |
| Bus Busy SDA/SDC low | SUSI_STATUS_BUSY_COLLISION |
| Arbitration Error/Collision Error | |
| On Write 1 write cycle | SUSI_STATUS_BUSY_COLLISION |
| SDA Remains low | |
| Time-out due to clock stretching | SUSI_STATUS_TIMEOUT |
| Address Non-ACK | SUSI_STATUS_NOT_FOUND |
| Write Non-ACK | SUSI_STATUS_WRITE_ERROR |
| Success | SUSI_STATUS_SUCCESS |

3.5.12 SusiSMBI2CWriteBlock

```
uint32_t SUSI_API SusiSMBI2CWriteBlock(uint32_t Id, uint8_t Addr, uint8_t Cmd,
                                         uint8_t *pBuffer, uint32_t Length)
```

Description:

Write multi-data using I²C block protocol from the target slave device in the SMBus.

Parameters:

Id

Selects target device. See **Table 16**.

Addr

Specifies the 8-bit device address, ranging from 0x00 to 0xFF. Whether to give a 1 (read) or 0 (write) to the LSB of slave address could be ignored.

Cmd

Specifies the offset or command of the device register to write data to.

pBuffer

Pointer to a byte array in which the function writes the block data.

Length

Specifies the number of bytes to be write.

Return Status Code:


| Condition | Return Value |
|-----------------------|-------------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| pBuffer==NULL | SUSI_STATUS_INVALID_PARAMETER |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Device unsupported | SUSI_STATUS_UNSUPPORTED |

| | |
|-----------------------------------|----------------------------|
| Bus Busy SDA/SDC low | SUSI_STATUS_BUSY_COLLISION |
| Arbitration Error/Collision Error | |
| On Write 1 write cycle | SUSI_STATUS_BUSY_COLLISION |
| SDA Remains low | |
| Time-out due to clock stretching | SUSI_STATUS_TIMEOUT |
| Address Non-ACK | SUSI_STATUS_NOT_FOUND |
| Write Non-ACK | SUSI_STATUS_WRITE_ERROR |
| Success | SUSI_STATUS_SUCCESS |

3.6 Watchdog Functions

After the watchdog timer has started it must be triggered within the (Delay + Event Timeout) millisecond parameters as set in the start function. Following the initial trigger, every subsequent trigger must occur within the (Event Timeout) millisecond parameter. Should a trigger not be called within the relevant time limit a system reset will occur. The SUSI watchdog timer may support two stages. If the watchdog is not triggered within the event timeout, an NMI, IRQ, or hardware output will be generated. Then the reset timeout becomes active. If the watchdog timer is not triggered within the reset timeout a reset will be generated

Initial timing:

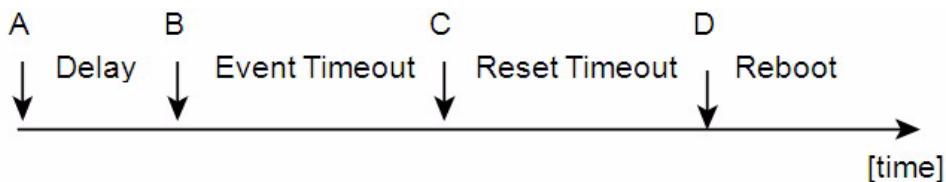

Timing after trigger:



Where:

Stage A

Watchdog is started.

Stage B

Initial delay period is exhausted.

Stage C/F

Event is triggered, NMI, IRQ, or PIN is triggered to allow for possible software recovery.

Stage D/G

System is reset.

Stage E

- Watchdog is Triggered.
- Trigger / Stop must be called before Stage C/F to prevent event from being generated.
- Trigger / Stop must be called before Stage D/G to prevent the system from being reset.

Table 17 Watchdog ID

| Id | Description |
|--------------------|-----------------------|
| SUSI_ID_WATCHDOG_1 | First watchdog timer |
| SUSI_ID_WATCHDOG_2 | Second watchdog timer |
| SUSI_ID_WATCHDOG_3 | Third watchdog timer |

3.6.1 SusiWDogGetCaps

```
uint32_t SUSI_API SusiWDogGetCaps(uint32_t Id, uint32_t ItemId, uint32_t *pValue)
```

Description:

Gets watchdog capabilities.

Parameters:**Id**

Selects target device. See **Table 17**.

ItemId

Selects target capability. See **Table 18**.

pValue

Pointer to a buffer that receives the target capability.

Return Status Code:

| Condition | Return Value |
|-----------------------|-------------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| pValue==NULL | SUSI_STATUS_INVALID_PARAMETER |
| Unknown Id or ItemId | SUSI_STATUS_UNSUPPORTED |
| Success | SUSI_STATUS_SUCCESS |

Table 18 Watchdog capabilities item Id

| Item Id | Description |
|---------------------------|------------------------------|
| SUSI_ID_WDT_DELAY_MAXIMUM | The maximum delay time value |
| SUSI_ID_WDT_DELAY_MINIMUM | The minimum delay time value |
| SUSI_ID_WDT_EVENT_MAXIMUM | The maximum event time value |
| SUSI_ID_WDT_EVENT_MINIMUM | The minimum event time value |
| SUSI_ID_WDT_RESET_MAXIMUM | The maximum reset time value |
| SUSI_ID_WDT_RESET_MINIMUM | The minimum reset time value |
| SUSI_ID_WDT_UNIT_MINIMUM | The minimum unit value |
| SUSI_ID_WDT_DELAY_TIME | Current delay time setting |

| | |
|------------------------|--|
| SUSI_ID_WDT_EVENT_TIME | Current event time setting |
| SUSI_ID_WDT_RESET_TIME | Current reset time setting |
| SUSI_ID_WDT_EVENT_TYPE | Current event type (Table 19) |

3.6.2 SusiWDogStart

```
uint32_t SUSI_API SusiWDogStart(uint32_t Id, uint32_t DelayTime, uint32_t EventTime,
                                uint32_t ResetTime, uint32_t EventType)
```

Description:

Start the watchdog timer and set the parameters. To adjust the parameters, the watchdog must be stopped and then started again with the new values. If the hardware implementation of the watchdog timer does not allow a setting at the exact time selected, then SUSI API selects the next possible longer timing.

Parameters:

Id

Selects target device. See **Table 17**.

DelayTime

Initial delay for the watchdog timer in milliseconds.

EventTime

Watchdog timeout interval in milliseconds to trigger an event.

ResetTime

Watchdog timeout interval in milliseconds to trigger a reset.

EventType

To select one kind of event type. See **Table 19**.

Return Status Code:

| Condition | Return Value |
|-----------------------|-------------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Wrong time range | SUSI_STATUS_INVALID_PARAMETER |
| Success | SUSI_STATUS_SUCCESS |

Table 19 Watchdog timer event type

| Event Type | Description |
|--------------------------|-------------|
| SUSI_WDT_EVENT_TYPE_NONE | No event |
| SUSI_WDT_EVENT_TYPE_IRQ | IRQ event |

| | |
|----------------------------|--------------------|
| SUSI_WDT_EVENT_TYPE_PWRBTN | Power button event |
|----------------------------|--------------------|

3.6.3 SusiWDogStop

```
uint32_t SUSI_API SusiWDogStop(uint32_t Id)
```

Description:

Stops the operation of the watchdog timer.

Parameters:

Id

Selects target device. See **Table 17**.

Return Status Code:

| Condition | Return Value |
|-----------------------|-----------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Success | SUSI_STATUS_SUCCESS |

3.6.4 SusiWDogTrigger

```
uint32_t SUSI_API SusiWDogTrigger(uint32_t Id)
```

Description:

Trigger the watchdog timer.

Parameters:

Id

Selects target device. See **Table 17**.

Return Status Code:

| Condition | Return Value |
|-----------------------|-----------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Success | SUSI_STATUS_SUCCESS |

3.6.5 SusiWDogSetCallBack

```
uint32_t SUSI_API SusiWDogSetCallBack(uint32_t Id,
```

```
SUSI_WDT_INT_CALLBACK pfnCallback, void *Context)
```

Description:

The call back function pointer can be transmit from the application when IRQ triggered.

Parameters:

Id

Selects target device. See **Table 17**.

pfnCallback

Call back function pointer, SUSI_WDT_INT_CALLBACK is function pointer type, it can set NULL to clear. The type definition is shown below,
*typedef void (*SUSI_WDT_INT_CALLBACK)(void*);*

Context

Pointer to a user context structure for callback function.

Return Status Code:

| Condition | Return Value |
|-----------------------|-----------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Success | SUSI_STATUS_SUCCESS |

3.7 GPIO Functions

Programmable GPIO allows developers to dynamically set the GPIO input or output status

Table 20 GPIO ID

| Id | Description |
|----------------------|---|
| SUSI_ID_GPIO(X) | X is GPIO pin number, definition as below: <code>#define SUSI_ID_GPIO(x) (0x0000 x)</code> This ID control single pin only. |
| SUSI_ID_GPIO_BANK(Y) | Y is GPIO bank number, definition as below: <code>#define SUSI_ID_GPIO_BANK(Y) (0x10000 Y)</code> This ID control maximum 32 pins per bank. |

3.7.1 SusiGPIOGetCaps

```
uint32_t SUSI_API SusiGPIOGetCaps(uint32_t Id, uint32_t ItemId, uint32_t *pValue)
```

Description:

Reads the capabilities of the current GPIO implementation from the selected GPIO interface.

Parameters:

Id

Selects target device. See **Table 20**.

ItemId

Selects target capability. See **Table 21**.

pValue

Pointer to a buffer that receives the target capability.

Return Status Code:

| Condition | Return Value |
|-----------------------|-------------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| pValue==NULL | SUSI_STATUS_INVALID_PARAMETER |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Success | SUSI_STATUS_SUCCESS |

Table 21 GPIO capabilities item Id

| Item Id | Description |
|----------------------------|------------------------------|
| SUSI_ID_GPIO_INPUT_SUPPORT | Get GPIO input support state |

3.7.2 SusiGPIOGetDirection

```
uint32_t SUSI_API SusiGPIOGetDirection(uint32_t Id, uint32_t Bitmask,
uint32_t *pDirection)
```

Description:

Reads the capabilities of the current GPIO implementation from the selected GPIO interface.

Parameters:

Id

Selects target device. See **Table 20**.

Bitmask

Value for a bit mask. Only selected bits are changed, unselected bits remain unchanged.

This parameter will be ignored when single pin mode..

pDirection

Pointer to a buffer that receives the direction of the selected GPIO ports.

Return Status Code:

| Condition | Return Value |
|---------------------------|-------------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| pDirection==NULL | SUSI_STATUS_INVALID_PARAMETER |
| Bitmask==0 when bank mode | SUSI_STATUS_INVALID_PARAMETER |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Success | SUSI_STATUS_SUCCESS |

3.7.3 SusiGPIOSetDirection

```
uint32_t SUSI_API SusiGPIOSetDirection(uint32_t Id, uint32_t Bitmask, uint32_t Direction)
```

Description:

Sets the configuration for the selected GPIO ports.

Parameters:

Id

Selects target device. See **Table 20**.

Bitmask

Value for a bit mask. Only selected bits are changed, unselected bits remain unchanged.

This parameter will be ignored when single pin mode.

Direction

Sets the direction of the selected GPIO ports.

Return Status Code:

| Condition | Return Value |
|---------------------------|-------------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| Bitmask==0 when bank mode | SUSI_STATUS_INVALID_PARAMETER |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Success | SUSI_STATUS_SUCCESS |

3.7.4 SusiGPIOGetLevel

```
uint32_t SUSI_API SusiGPIOGetLevel(uint32_t Id, uint32_t Bitmask, uint32_t *pLevel)
```

Description:

Read level the from GPIO ports.

Parameters:

Id

Selects target device. See **Table 20**.

Bitmask

Value for a bit mask. Only selected bits are changed, unselected bits remain unchanged.

This parameter will be ignored when single pin mode.

pLevel

Pointer to a buffer that receives the GPIO level.

Return Status Code:

| Condition | Return Value |
|---------------------------|-------------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| pLevel==NULL | SUSI_STATUS_INVALID_PARAMETER |
| Bitmask==0 when bank mode | SUSI_STATUS_INVALID_PARAMETER |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Success | SUSI_STATUS_SUCCESS |

3.7.5 SusiGPIOSetLevel

```
uint32_t SUSI_API SusiGPIOSetLevel(uint32_t Id, uint32_t Bitmask, uint32_t Level)
```

Description:

Write level to GPIO ports. Depending on the hardware implementation writing multiple GPIO ports with the bit mask option does not guarantee a time synchronous change of the output levels.

Parameters:**Id**

Selects target device. See **Table 20**.

Bitmask

Value for a bit mask. Only selected bits are changed, unselected bits remain unchanged.

This parameter will be ignored when single pin mode.

Level

Input level of the selected GPIO port.

Return Status Code:

| Condition | Return Value |
|---------------------------|-------------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| Bitmask==0 when bank mode | SUSI_STATUS_INVALID_PARAMETER |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Success | SUSI_STATUS_SUCCESS |

3.8 Smart Fan Functions

The Smart Fan function call is used to set fan speed configuration. You can use this function to easily control the fan speed. It takes a pointer to an instance of structure *SusiFanControl*, which is defined as follows:

```
#define SUSI_FAN_AUTO_CTRL_OPMODE_PWM 0
#define SUSI_FAN_AUTO_CTRL_OPMODE_RPM 1

typedef struct _AutoFan {
    uint32_t TmlSource;      // Thermal source
    uint32_t OpMode;
    uint32_t LowStopLimit;   // Temperature (0.1 Kelvins)
    uint32_t LowLimit;       // Temperature (0.1 Kelvins)
    uint32_t HighLimit;     // Temperature (0.1 Kelvins)
    uint32_t MinPWM;         // Enable when OpMode == FAN_AUTO_CTRL_OPMODE_PWM
    uint32_t MaxPWM;         // Enable when OpMode == FAN_AUTO_CTRL_OPMODE_PWM
    uint32_t MinRPM;         // Enable when OpMode == FAN_AUTO_CTRL_OPMODE_RPM
    uint32_t MaxRPM;         // Enable when OpMode == FAN_AUTO_CTRL_OPMODE_RPM
} AutoFan , *PAutoFan ;

// Mode
#define SUSI_FAN_CTRL_MODE_OFF 0
#define SUSI_FAN_CTRL_MODE_FULL 1
#define SUSI_FAN_CTRL_MODE_MANUAL 2
#define SUSI_FAN_CTRL_MODE_AUTO 3

typedef struct _SusiFanControl {
    uint32_t Size;
    uint32_t Mode;
    uint32_t PWM;           // Manual mode only (0 - 100%)
    AutoFan AutoControl;   // Auto mode only
} SusiFanControl , *PSusiFanControl;
```

If Mode member of *SusiFanControl* is not Auto, *AutoControl* member will be ignored. In auto mode, parameter “TmlSource” is use *SUSI_ID_HWM_TEMP_XXX* (**Table 3**) to select which thermal type to reference. If TmlSource does not match any temperature ID it means it is unknown or unsupported.

3.8.1 SusiFanControlGetCaps

```
uint32_t SUSI_API SusiFanControlGetCaps(uint32_t Id, uint32_t ItemId, uint32_t *pValue)
```

Description:

Gets fan control capabilities.

Parameters:

Id

Smart fan ID is same as Fan Speed Value ID. See **Table 4**.

ItemId

Selects target capability. See **Table 22**. This parameter can also input temperature ID (**Table 3**) to get is it supports in *SusiFanControl* function.

pValue

Pointer to a buffer that receives the target capability.

Return Status Code:

| Condition | Return Value |
|-----------------------|-------------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| pValue==NULL | SUSI_STATUS_INVALID_PARAMETER |
| Unknown Id or ItemId | SUSI_STATUS_UNSUPPORTED |
| Success | SUSI_STATUS_SUCCESS |

Table 22 Fan control capabilities item Id

| Item Id | Description |
|----------------------------------|--|
| SUSI_ID_FC_CONTROL_SUPPORT_FLAGS | Control support flags (See Table 23) |
| SUSI_ID_FC_AUTO_SUPPORT_FLAGS | Auto support flags (See Table 24) |

Table 23 Control Support Flags

| Flag Name | Description | Value |
|----------------------------------|--|-------|
| SUSI_FC_FLAG_SUPPORT_OFF_MODE | Support off mode | 0x01 |
| SUSI_FC_FLAG_SUPPORT_FULL_MODE | Support full mode | 0x02 |
| SUSI_FC_FLAG_SUPPORT_MANUAL_MODE | Support manual mode | 0x04 |
| SUSI_FC_FLAG_SUPPORT_AUTO_MODE | Support auto mode More detail to get Auto Support Flags | 0x08 |

Table 24 Auto Support Flags

| Flag Name | Description | Value |
|-----------|-------------|-------|
|-----------|-------------|-------|

| | | |
|--------------------------------------|---------------------------------|--------|
| SUSI_FC_FLAG_SUPPORT_AUTO_LOW_STOP | Auto mode support Low Stop | 0x01 |
| SUSI_FC_FLAG_SUPPORT_AUTO_LOW_LIMIT | Auto mode support Low Limit | 0x02 |
| SUSI_FC_FLAG_SUPPORT_AUTO_HIGH_LIMIT | Auto mode support High Limit | 0x04 |
| SUSI_FC_FLAG_SUPPORT_AUTO_PWM | Auto mode support PWM operation | 0x0100 |
| SUSI_FC_FLAG_SUPPORT_AUTO_RPM | Auto mode support RPM operation | 0x0200 |

3.8.2 SusiFanControlGetConfig

```
uint32_t SUSI_API SusiFanControlGetConfig(uint32_t Id, SusiFanControl *pConfig)
```

Description:

Get information about smart fan function mode and configuration.

Parameters:

Id

Smart fan ID is same as Fan Speed Value ID. See **Table 4**.

pConfig

Pointer to the smart fan function configuration.

Return Status Code:

| Condition | Return Value |
|------------------------------------|-------------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| pConfig==NULL | SUSI_STATUS_INVALID_PARAMETER |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Device does not support smart mode | SUSI_STATUS_UNSUPPORTED |
| Success | SUSI_STATUS_SUCCESS |

3.8.3 SusiFanControlSetConfig

```
uint32_t SUSI_API SusiFanControlSetConfig(uint32_t Id, SusiFanControl *pConfig)
```

Description:

Sets smart fan function mode and configuration.

Parameters:

Id

Smart fan ID is same as Fan Speed Value ID. See **Table 4**.

pConfig

Pointer to the smart fan function configuration.

Return Status Code:

| Condition | Return Value |
|-----------------------|-------------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| pConfig==NULL | SUSI_STATUS_INVALID_PARAMETER |
| Wrong configuration | SUSI_STATUS_INVALID_PARAMETER |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Success | SUSI_STATUS_SUCCESS |

3.9 Storage Functions

Access storage information and read / write data to the selected user data area. Developers can use this area to store their own data.

Table 25 Storage ID

| Id | Description |
|------------------------|-------------------------|
| SUSI_ID_STORAGE_STD | Standard storage device |
| SUSI_ID_STORAGE_OEM0~1 | Other storage devices |

3.9.1 SusiStorageGetCaps

```
uint32_t SUSI_API SusiStorageGetCaps(uint32_t Id, uint32_t ItemId, uint32_t *pValue)
```

Description:

Reads the capabilities of the current GPIO implementation from the selected GPIO interface.

Parameters:

Id

Selects target device. See **Table 25**.

ItemId

Selects target capability. See **Table 26**.

pValue

Pointer to a buffer that receives the target capability.

Return Status Code:

| Condition | Return Value |
|-----------------------|-------------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| pValue==NULL | SUSI_STATUS_INVALID_PARAMETER |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Device not support | SUSI_STATUS_UNSUPPORTED |
| Success | SUSI_STATUS_SUCCESS |

Table 26 Storage capabilities item Id

| Item Id | Description |
|-----------------------------|--|
| SUSI_ID_STORAGE_TOTAL_SIZE | Get storage total size in bytes |
| SUSI_ID_STORAGE_BLOCK_SIZE | Get storage block size in bytes |
| SUSI_ID_STORAGE_LOCK_STATUS | Get storage lock status. See Table 27 . |

| | |
|-----------------------------|--|
| SUSI_ID_STORAGE_PSW_MAX_LEN | Get maximum length in byte of storage lock key |
|-----------------------------|--|

Table 27 Storage Lock Status

| Lock Status | Description |
|----------------------------|-------------------|
| SUSI_STORAGE_STATUS_LOCK | Storage is lock |
| SUSI_STORAGE_STATUS_UNLOCK | Storage is unlock |

3.9.2 SusiStorageAreaRead

```
uint32_t SUSI_API SusiStorageAreaRead(uint32_t Id, uint32_t Offset, uint8_t *pBuffer,
uint32_t BufLen)
```

Description:

Reads data from the selected user data area.

Parameters:

Id

Selects target device. See **Table 25**.

Offset

Storage area start address offset in bytes.

pBuffer

Size in bytes of the buffer pointed to by the pBuffer parameter.

BufLen

Size in bytes of the information read to the buffer pointed to by the pBuffer parameter.

Return Status Code:

| Condition | Return Value |
|----------------------------|----------------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| pBuffer==NULL BufLen==0 | SUSI_STATUS_INVALID_PARAMETER |
| Offset+BufLen>TotalSize | SUSI_STATUS_INVALID_BLOCK_LENGTH |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Read error | SUSI_STATUS_READ_ERROR |
| Success | SUSI_STATUS_SUCCESS |

3.9.3 SusiStorageAreaWrite

```
uint32_t SUSI_API SusiStorageAreaWrite(uint32_t Id, uint32_t Offset, uint8_t *pBuffer,
uint32_t BufLen)
```

Description:

Writes data to the selected user data area.

Parameters:**Id**

Selects target device. See **Table 25**.

Offset

Storage area start address offset in bytes.

pBuffer

Size in bytes of the buffer pointed to by the pBuffer parameter.

BufLen

Size in bytes of the information read to the buffer pointed to by the pBuffer parameter.

Return Status Code:

| Condition | Return Value |
|----------------------------|----------------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| pBuffer==NULL BufLen==0 | SUSI_STATUS_INVALID_PARAMETER |
| Offset+BufLen>TotalSize | SUSI_STATUS_INVALID_BLOCK_LENGTH |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Write error | SUSI_STATUS_WRITE_ERROR |
| Success | SUSI_STATUS_SUCCESS |

3.9.4 SusiStorageAreaSetLock

```
uint32_t SUSI_API SusiStorageAreaSetLock(uint32_t Id, uint8_t *pBuffer, uint32_t BufLen)
```

Description:

Lock a storage area for write protection.

Parameters:**Id**

Selects target device. See **Table 25**.

pBuffer

Locks key buffer.

BufLen

Number of key buffers

Return Status Code:

| Condition | Return Value |
|----------------------------|-------------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| pBuffer==NULL BufLen==0 | SUSI_STATUS_INVALID_PARAMETER |
| Lock error | SUSI_STATUS_WRITE_ERROR |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Device not support | SUSI_STATUS_UNSUPPORTED |
| Success | SUSI_STATUS_SUCCESS |

3.9.5 SusiStorageAreaSetUnlock

```
uint32_t SUSI_API SusiStorageAreaSetUnlock(uint32_t Id, uint8_t *pBuffer,
                                         uint32_t BufLen)
```

Description:

Unlock a storage area for write protection.

Parameters:

Id

Selects target device. See **Table 25**.

pBuffer

Unlock key buffer.

BufLen

Number of key buffers

Return Status Code:

| Condition | Return Value |
|----------------------------|-------------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| pBuffer==NULL BufLen==0 | SUSI_STATUS_INVALID_PARAMETER |
| Unlock error | SUSI_STATUS_WRITE_ERROR |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Device not support | SUSI_STATUS_UNSUPPORTED |
| Success | SUSI_STATUS_SUCCESS |

3.10 Thermal Protection Functions

The Thermal Protection function call is used to set hardware base thermal monitoring and notification.

It takes a pointer to an instance of structure *SusiThermalProtect*, which is defined as follows:

```
typedef struct _SusiThermalProtect{  
    uint32_t SourceId;  
    uint32_t EventType;  
    uint32_t SendEventTemperature;  
    uint32_t ClearEventTemperature;  
} SusiThermalProtect, *PSusiThermalProtect;
```

Where:

SourceId

Setting thermal source ID here. See **Table 3**.

EventType

This byte can set up a thermal protect event, see **Table 28**. NOT every platform supports all event type.

SendEevntTemperature

Unit is 0.1 Kelvins. When thermal source goes over this value, SUSI will send event according Event Type.

ClearEventTemperature

Unit is 0.1 Kelvins. When thermal source goes below this value and Event is sent, SUSI will clear event according Event Type

Table 28 Thermal Protection Event Type

| Event Type Name | Description | Value |
|-----------------------------|-----------------|-------|
| SUSI_THERMAL_EVENT_SHUTDOWN | Shutdown event | 0x00 |
| SUSI_THERMAL_EVENT_THROTTLE | Throttle event | 0x01 |
| SUSI_THERMAL_EVENT_POWEROFF | Power off event | 0x03 |
| SUSI_THERMAL_EVENT_NONE | No event | 0xFF |

Table 29 Thermal Protection ID

| Id | Description |
|---------------------------|---------------------------|
| SUSI_ID_THERMAL_PROTECT_1 | Thermal protection zone 1 |
| SUSI_ID_THERMAL_PROTECT_2 | Thermal protection zone 2 |
| SUSI_ID_THERMAL_PROTECT_3 | Thermal protection zone 3 |
| SUSI_ID_THERMAL_PROTECT_4 | Thermal protection zone 4 |

3.10.1 SusiThermalProtectionGetCaps

```
uint32_t SUSI_API SusiThermalProtectionGetCaps(uint32_t Id, uint32_t ItemId,  
uint32_t *pValue)
```

Description:

Gets Thermal Protection capabilities.

Parameters:

Id

Selects target device. See **Table 29**.

ItemId

Selects target capability. See **Table 30**. This parameter can also input temperature ID (**Table 3**) to get is it supports in *SusiThermalProtection* function.

pValue

Pointer to a buffer that receives the target capability.

Return Status Code:

| Condition | Return Value |
|-----------------------|-------------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| pValue==NULL | SUSI_STATUS_INVALID_PARAMETER |
| Unknown Id or ItemId | SUSI_STATUS_UNSUPPORTED |
| Success | SUSI_STATUS_SUCCESS |

Table 30 Thermal Protection capabilities item Id

| Item Id | Description |
|----------------------------------|--|
| SUSI_ID_TP_EVENT_SUPPORT_FLAGS | Event support flags (See Table 31) |
| SUSI_ID_TP_EVENT_TRIGGER_MAXIMUM | The maximum temperature to trigger event |
| SUSI_ID_TP_EVENT_TRIGGER_MINIMUM | The minimum temperature to trigger event |
| SUSI_ID_TP_EVENT_CLEAR_MAXIMUM | The maximum temperature to clear event |
| SUSI_ID_TP_EVENT_CLEAR_MINIMUM | The minimum temperature to clear event |

Table 31 Thermal Protection Support Flags

| Flag Name | Description | Value |
|------------------------------------|--------------------------|-------|
| SUSI_THERMAL_FLAG_SUPPORT_SHUTDOWN | Supports shutdown event | 0x01 |
| SUSI_THERMAL_FLAG_SUPPORT_THROTTLE | Supports throttle event | 0x02 |
| SUSI_THERMAL_FLAG_SUPPORT_POWEROFF | Supports power off event | 0x04 |

3.10.2 SusiThermalProtectionSetConfig

```
uint32_t SUSI_API SusiThermalProtectionSetConfig(uint32_t Id,  
SusiThermalProtect *pConfig)
```

Description:

Set Thermal Protection configuration.

Parameters:

Id

Selects target device. See **Table 29**.

pConfig

A data package for thermal protection.

Return Status Code:

| Condition | Return Value |
|---------------------------------------|-------------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| pConfig==NULL | SUSI_STATUS_INVALID_PARAMETER |
| Config invalid | SUSI_STATUS_INVALID_PARAMETER |
| Source Id or event type not supported | SUSI_STATUS_UNSUPPORTED |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Success | SUSI_STATUS_SUCCESS |

3.10.3 SusiThermalProtectionGetConfig

```
uint32_t SUSI_API SusiThermalProtectionGetConfig(uint32_t Id,  
SusiThermalProtect *pConfig)
```

Description:

Get Thermal Protection configuration.

Parameters:

Id

Selects target device. See **Table 29**.

pConfig

A data package for thermal protection.

Return Status Code:

| Condition | Return Value |
|-----------------------|-------------------------------|
| Library uninitialized | SUSI_STATUS_NOT_INITIALIZED |
| pConfig==NULL | SUSI_STATUS_INVALID_PARAMETER |
| Unknown Id | SUSI_STATUS_UNSUPPORTED |
| Success | SUSI_STATUS_SUCCESS |