


Our Products Make Your Product Better®

To learn more about EMAC's products and services and how they can help your project

http://ftp.emacinc.com/Tech_Info/About_EMAC_Products_and_Services.pdf

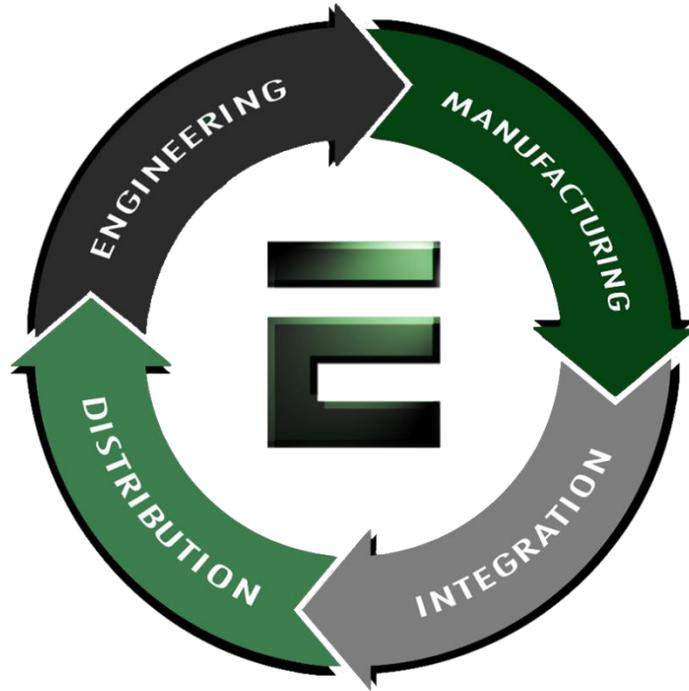

Authorized Distributor, Integrator, and Value-Added Reseller

Manual downloaded from ftp.emacinc.com

For purchase information please contact info@emacinc.com

For technical support please submit a ticket at www.emacinc.com/support

GENE-HD05

AMD® G-series T56N/T40E/T40R

Processor

Onboard DDR3 1066/1333 SODIMM

18/24-bit Single/Dual-channel LVDS LCD

8 USB 2.0, 4 COM, 2 SATA, 1 CFast™

2 GbE, Mini Card

Copyright Notice

This document is copyrighted, 2013. All rights are reserved. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of the original manufacturer. Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, or for any infringements upon the rights of third parties that may result from its use.

The material in this document is for product information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, AAEON assumes no liabilities resulting from errors or omissions in this document, or from the use of the information contained herein.

AAEON reserves the right to make changes in the product design without notice to its users.

Acknowledgments

All other products' name or trademarks are properties of their respective owners.

- AMD[®] is trademark of Advanced Micro Devices.
- Microsoft Windows[®] is a registered trademark of Microsoft Corp.
- ITE is a trademark of Integrated Technology Express, Inc.
- IBM, PC/AT, PS/2, and VGA are trademarks of International Business Machines Corporation.

All other product names or trademarks are properties of their respective owners.

Packing List

Before you begin installing your card, please make sure that the following materials have been shipped:

- Product DVD
- GENE-HD05

If any of these items are missing or damaged, please contact your distributor or sales representative immediately.

Contents

Chapter 1 General Information

1.1 Introduction.....	1-2
1.2 Features	1-3
1.3 Specifications	1-4

Chapter 2 Quick Installation Guide

2.1 Safety Precautions	2-2
2.2 Location of Connectors and Jumpers	2-3
2.3 Mechanical Drawing	2-5
2.4 List of Jumpers	2-7
2.5 List of Connectors	2-8
2.6 Setting Jumpers	2-10
2.7 Touch Screen 4/5/8-Wire Selection (JP1).....	2-11
2.8 AT/ATX Power Supply Mode Selection-1 (JP2).....	2-11
2.9 COM2 Pin8 Function Selection (JP3)	2-11
2.10 Clear CMOS Selection (JP4)	2-12
2.11 LVDS Backlight Lightness Up/down Selection (JP5).....	2-12
2.12 LVDS Operating VDD Selection (JP6)	2-12
2.13 LVDS Backlight Lightness Control Mode Selection (JP7)	2-13
2.14 LVDS Backlight Inverter VCC Selection (JP8).....	2-13
2.15 AT/ATX Power Supply Mode Selection-2 (JP9).....	2-13
2.16 LPC Port (CN1)	2-14

2.17 Touch Screen Connector (CN2).....	2-15
2.18 CPU FAN Connector (CN3)	2-17
2.19 External +5VSB Input Connector (CN4)	2-18
2.20 External +12V Input Connector (CN5)	2-18
2.21 Front Panel Connector (CN6)	2-18
2.22 Digital IO Port Connector (CN7).....	2-19
2.23 LPT Port Connector (CN8).....	2-20
2.24 COM Port 2 Connector (CN9)	2-21
2.25 COM Port 3 Connector (CN10)	2-23
2.26 COM Port 4 Connector (CN11)	2-24
2.27 USB 2.0 Ports 7 Connector (CN12)	2-25
2.28 USB 2.0 Ports 8 Connector (CN13)	2-25
2.29 USB 2.0 Ports 5 Connector (CN14)	2-26
2.30 USB 2.0 Ports 6 Connector (CN15)	2-26
2.31 USB 2.0 Ports 3 Connector (CN16)	2-27
2.32 USB 2.0 Ports 4 Connector (CN17)	2-27
2.33 Audio I/O Port Connector (CN18).....	2-28
2.34 SATA Port1 Connector (CN19)	2-28
2.35 SATA Port2 Connector (CN20)	2-29
2.36 +5V Output for SATA HDD Connector (CN21)	2-30
2.37 LVDS Inverter / Backlight Connector (CN22).....	2-30
2.38 LVDS Port Connector (CN23)	2-31
2.39 COM Port 1 (D-SUB 9) Connector (CN24)	2-32
2.40 Realtek LAN (RJ-45) Port2 Connector (CN25)	2-33
2.41 Realtek LAN (RJ-45) Port1 Connector (CN26)	2-34

2.42 USB Port 1 and 2 Connector (CN27)	2-34
2.43 HDMI Port Connector (CN28)	2-35
2.44 PS/2 Keyboard/Mouse Combo Port Connector (CN29)	2-36
2.45 VGA Port Connector (CN30)	2-37
2.46 UIM Card Module Connector (CN32)	2-38
2.47 DDR3 SODIMM Slot (SO-DIMM1)	2-38
2.48 CFast Slot (CFDA1)	2-38
2.49 Mini-Card Slot (PCIEA1)	2-39

Chapter 3 AMI BIOS Setup

3.1 System Test and Initialization.	3-2
3.2 AMI BIOS Setup	3-3

Chapter 4 Driver Installation

4.1 Installation	4-3
------------------------	-----

Appendix A Programming The Watchdog Timer

A.1 Programming	A-2
A.2 F81866 Watchdog Timer Initial Program	A-5

Appendix B I/O Information

B.1 I/O Address Map	B-2
B.2 1 st MB Memory Address Map	B-4
B.3 IRQ Mapping Chart	B-5
B.4 DMA Channel Assignments	B-7

Appendix C Mating Connector

C.1 List of Mating Connectors and Cables.....C-2

Appendix D AHCI Setting

D.1 Setting AHCID-2

Appendix E Electrical Specifications for I/O Ports

E.1 Electrical Specifications for I/O Ports.....E-2

Chapter

1

**General
Information**

1.1 Introduction

AAEON announces a brand new 3.5" SubCompact Board GENE-HD05, designed to fit in diverse applications that demand for fitting in different space limitations and high performance.

GENE-HD05 accommodates onboard AMD® G-series™ T56N/T40E/T40R Processor and features DDR3 SODIMM 1066/1333 system memory up to 4GB. Moreover, GENE-HD05 adopts AMD® A50M chipset to achieve an excellent performance.

In addition, GENE-HD05 deploys Realtek® 8111E Ethernet chip to feature two RJ-45 ports onboard to display the transcendent performance of network connections. The display chipset of GENE-HD05 supports 18/24-bit dual/single channel LVDS LCD and HDMI function.

In addition to the Mini Card expansion, this model equips two SATA and one CFast™ for the storage and eight USB 2.0 ports, four COM ports, 8-bit Digital I/O for flexible I/O expansion. The GENE-HD05 is an excellent choice for your vital applications.

1.2 Features

- Onboard AMD® G-series™ T56N/T40E/T40R Processor, Up to 1.65 GHz
- AMD® A50M
- DDR3 SODIMM 1066/1333 (T56N) Memory Up to 4 GB
- Gigabit Ethernet x 2
- 18/24-bit Dual/Single Channel LVDS LCD, CRT, HDMI
- 2CH AC97 2.3 Codec Audio
- CFast™ x 1, mSATA x 1 (Configured by BIOS), SATA x 2
- USB 2.0 x 8, COM x 4, 8-bit Digital I/O
- Mini Card Expansion Interfaces Co-lay mSATA Function
- Supports TPM Module (Optional)
- Single DC 12V Input For Easy Power Integration

1.3 Specifications

System

- Form Factor 3.5" SubCompact Board
- Processor AMD® G-series™
T56N/T40E/T40R Processor
- System Memory SODIMM DDR3 1066/1333 Up to
4GB
- Chipset AMD® A50M
- I/O Chipset Fintek 81866D
- Ethernet 10/100/1000Base-TX (Realtek®
8111E), RJ-45 x 2
- BIOS AMI Plug & Play BIOS
- Wake On LAN Yes
- Watchdog Timer Generates a time-out system reset
- H/W Status Monitoring Supports power supply voltages,
fan speed, and temperature
monitoring
- Expansion Interface Mini Card connector x 1, TPM
Module (Optional)
- Battery Lithium battery
- Power Requirement DC 12V
- Power Consumption AMD® G-series™ T56N 1.65GHz,
(Typical) DDR3 4GB, 1.73 A @ +12V
- Board Size 5.75" x 4" (146mm x 101.6mm)

- Gross Weight 0.88 lb (0.4 Kg)
- Operation Temperature 32°F ~ 140°F (0°C ~ 60°C)
- Storage Temperature -40°F ~ 176°F (-40°C ~ 80°C)
- Operation Humidity 0% ~ 90% relative humidity, non-condensing

Display: Supports CRT/LVDS/HDMI simultaneous/ dual view displays

- Chipset AMD® G-series CPU integrated
- Resolutions Up to 2560 x 1600 T56N(18W)
1920 x 1200 T40E/T40R
(6.5W/5.5W) for CRT;
Up to 1920x1200 for HDMI;
Up to 1920 x 1200 for dual channel LVDS
- LCD Interface 18/24-bit dual/single channel LVDS

I/O

- Storage SATA6.0 Gb/s x 2, CFast™ x 1
- Serial Port RS-232 x 3, RS-232/422/485 x 1
- Parallel Port SPP/EPP/ECP Mode
- USB USB2.0 x 8
- PS/2 Port Keyboard x 1, Mouse x 1
- Digital I/O Supports 8-bit (programmable)
- Audio Line-in, Line-out, & Mic-in

Chapter

2

**Quick
Installation
Guide**

2.1 Safety Precautions

Warning!


Always completely disconnect the power cord from your board whenever you are working on it. Do not make connections while the power is on, because a sudden rush of power can damage sensitive electronic components.

Caution!


Always ground yourself to remove any static charge before touching the board. Modern electronic devices are very sensitive to static electric charges. Use a grounding wrist strap at all times. Place all electronic components on a static-dissipative surface or in a static-shielded bag when they are not in the chassis

2.2 Location of Connectors and Jumpers


Component Side

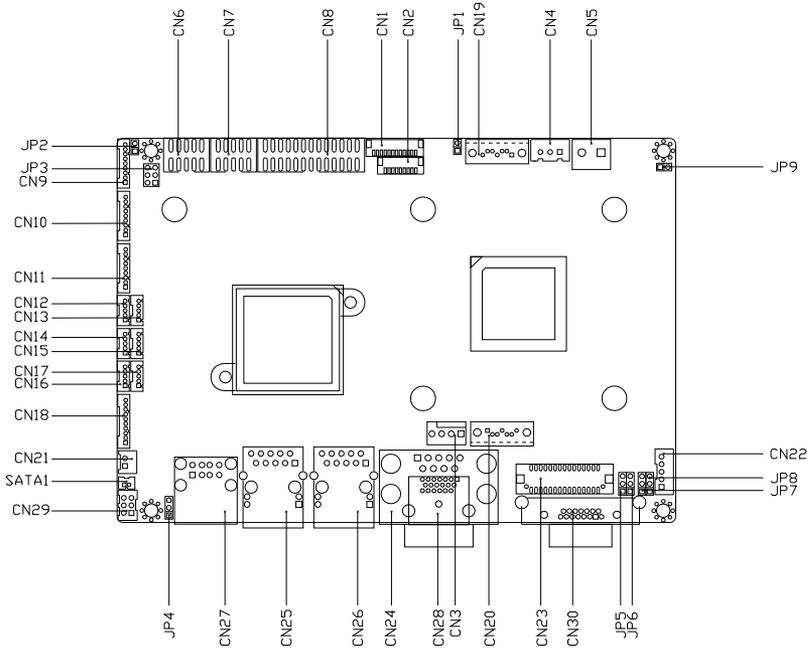

Component Side

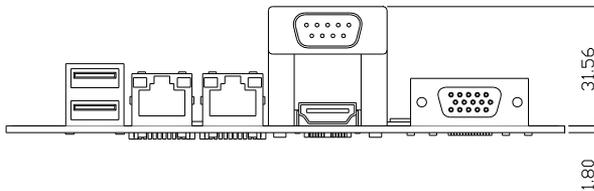


Solder Side

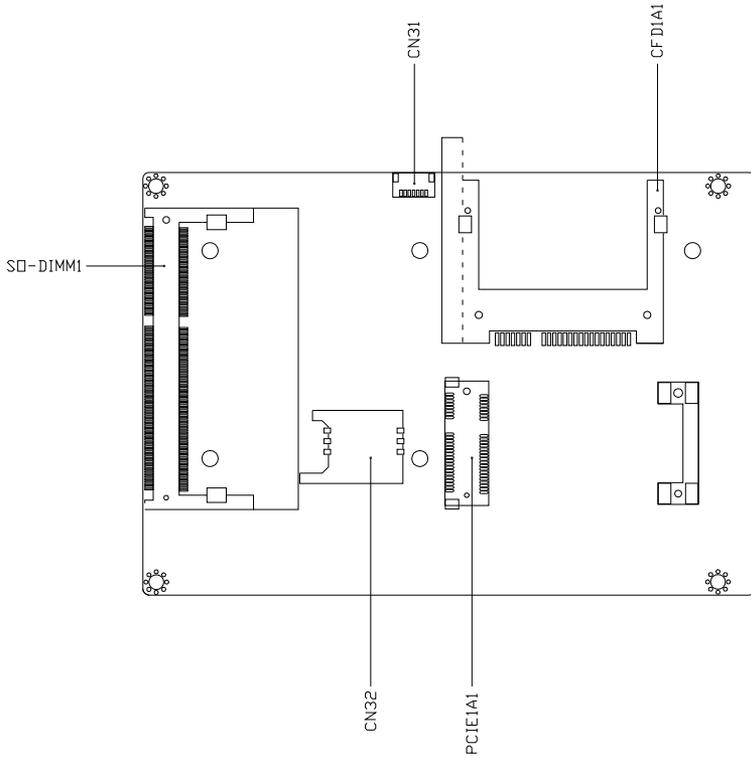

Solder Side

Solder Side

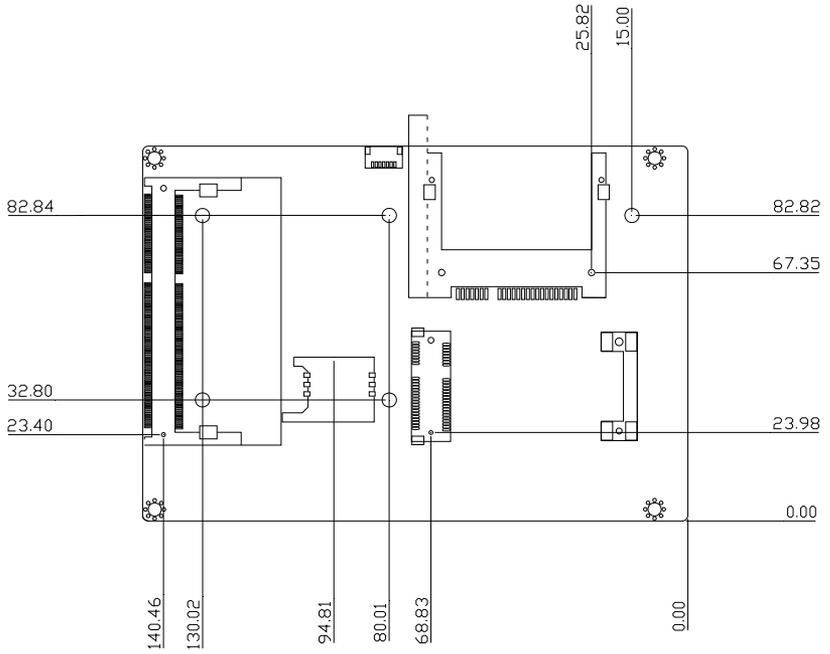

Solder Side

2.4 List of Jumpers

The board has a number of jumpers that allow you to configure your system to suit your application.

The table below shows the function of each of the board's jumpers:

Label	Function
JP1	Touch Screen 4/5/8-wire Mode Selection
JP2	AT/ATX Power Supply Mode Selection-1
JP3	COM2 Pin8 Function Selection
JP4	Clear CMOS Jumper
JP5	LVDS Backlight Lightness Up/Down Selection
JP6	LVDS Operating VDD Selection
JP7	LVDS Backlight Lightness Control Mode Selection
JP8	LVDS Backlight Inverter VCC Selection
JP9	AT/ATX Power Supply Mode Selection-2

2.5 List of Connectors

The board has a number of connectors that allow you to configure your system to suit your application. The table below shows the function of each board's connectors:


Label	Function
CN1	LPC Port
CN2	Touch Screen Connector
CN3	CPU FAN
CN4	External +5VSB Input
CN5	External +12V Input
CN6	Front Panel Connector
CN7	Digital IO Port
CN8	LPT Port
CN9	COM Port 2
CN10	COM Port 3
CN11	COM Port 4
CN12	USB 2.0 Ports 7
CN13	USB 2.0 Ports 8
CN14	USB 2.0 Ports 5
CN15	USB 2.0 Ports 6
CN16	USB 2.0 Ports 3
CN17	USB 2.0 Ports 4
CN18	Audio I/O Port
CN19	SATA Port1 Connector
CN20	SATA Port 2 Connector

CN21	+5V Output for SATA HDD
CN22	LVDS Inverter / Backlight Connector
CN23	LVDS Port
CN24	COM Port 1 (D-SUB 9)
CN25	Realtek LAN (RJ-45) Port 2
CN26	Realtek LAN (RJ-45) Port 1
CN27	USB Ports 1 and 2
CN28	HDMI Port
CN29	PS/2 Keyboard/Mouse Combo Port
CN30	VGA Port
CN31	SPI Flash JTAG
CN32	UIM Card Module
SO-DIMM1	DDR3 SODIMM Slot
CFDA1	CFast Slot
PCIEA1	Mini-Card Slot

2.6 Setting Jumpers

You configure your card to match the needs of your application by setting jumpers. A jumper is the simplest kind of electric switch. It consists of two metal pins and a small metal clip (often protected by a plastic cover) that slides over the pins to connect them. To “close” a jumper you connect the pins with the clip.

To “open” a jumper you remove the clip. Sometimes a jumper will have three pins, labeled 1, 2 and 3. In this case you would connect either pins 1 and 2 or 2 and 3.


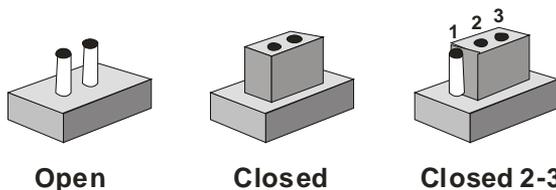


A pair of needle-nose pliers may be helpful when working with jumpers.

If you have any doubts about the best hardware configuration for your application, contact your local distributor or sales representative before you make any change.

Generally, you simply need a standard cable to make most connections.

2.7 Touch Screen 4/5/8-Wire Selection (JP1)

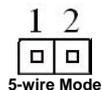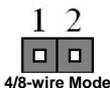




JP1	Function
1-2	4/8-wire (Default)
1-2 (open)	5-wire

2.8 AT/ATX Power Supply Mode Selection-1 (JP2)





JP2	Function
1-2	AT Mode (Default)
1-2 (open)	ATX Mode

2.9 COM2 Pin8 Function Selection (JP3)

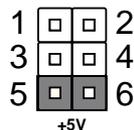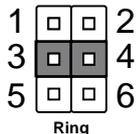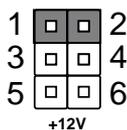


JP3	Function
1-2	+12V
3-4	Ring (Default)
5-6	+5V

2.10 Clear CMOS Selection (JP4)

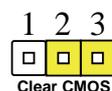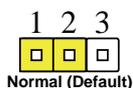

JP4	Function
1-2	Normal (Default)
2-3	Clear CMOS



2.11 LVDS Backlight Lightness Up/down Selection (JP5)

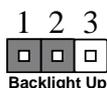

JP5	Function
1-2	Backlight Up
2-3	Backlight Down



Note: Up/Down Selection is Push-Button type interface (do not use for Jumper Header) – and is only for PWM type Backlight Control (JP7 2-3).

2.12 LVDS Operating VDD Selection (JP6)

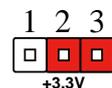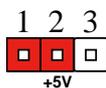



JP6	Function
1-2	+5V
2-3	+3.3V (Default)

2.13 LVDS Backlight Lightness Control Mode Selection (JP7)

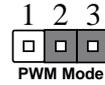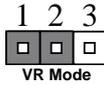

JP7	Function
1-2	VR Mode (Default)
2-3	PWM Mode

2.14 LVDS Backlight Inverter VCC Selection (JP8)

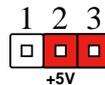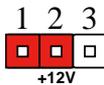


JP8	Function
1-2	+12V
2-3	+5V (Default)

2.15 AT/ATX Power Supply Mode Selection-2 (JP9)



JP9	Function
1-2	AT Mode (Default)
1-2 (Open)	ATX Mode


2.16 LPC Port (CN1)

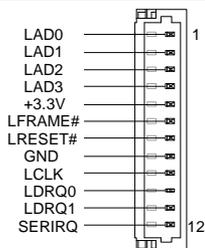

Pin	Pin Name	Signal Type	Signal Level
1	LAD0	I/O	+3.3V
2	LAD1	I/O	+3.3V
3	LAD2	I/O	+3.3V
4	LAD3	I/O	+3.3V
5	+3.3V	PWR	+3.3V
6	LFRAME#	IN	
7	LRESET#	OUT	+3.3V
8	GND	GND	
9	LCLK	OUT	
10	LDRQ0	IN	
11	LDRQ1	IN	
12	SERIRQ	I/O	+3.3V


2.17 Touch Screen Connector (CN2)

8 Wires

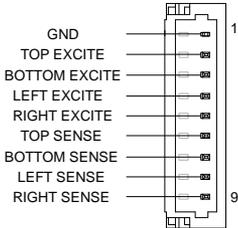


Pin	Pin Name	Signal Type	Signal Level
1	GND	GND	
2	TOP EXCITE	IN	
3	BOTTOM EXCITE	IN	
4	LEFT EXCITE	IN	
5	RIGHT EXCITE	IN	
6	TOP SENSE	IN	
7	BOTTOM SENSE	IN	
8	LEFT SENSE	IN	
9	RIGHT SENSE	IN	

4 Wires

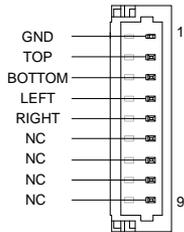

Pin	Pin Name	Signal Type	Signal Level
1	GND	GND	
2	TOP	IN	
3	BOTTOM	IN	
4	LEFT	IN	
5	RIGHT	IN	
6	NC		
7	NC		
8	NC		
9	NC		


5 Wires

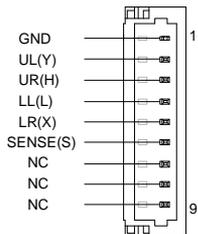

Pin	Pin Name	Signal Type	Signal Level
1	GND	GND	
2	UL(Y)	IN	
3	UR(H)	IN	
4	LL(L)	IN	
5	LR(X)	IN	
6	SENSE(S)	IN	
7	NC		
8	NC		
9	NC		


Note: Touch mode can be set by JP1

2.18 CPU FAN Connector (CN3)

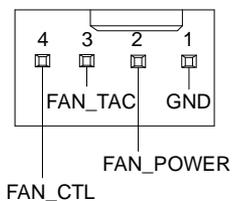


Pin	Pin Name	Signal Type	Signal Level
1	GND	GND	
2	FAN_POWER	PWR	+12V
3	FAN_TAC	IN	
4	FAN_CTL	IN	

2.19 External +5VSB Input Connector (CN4)

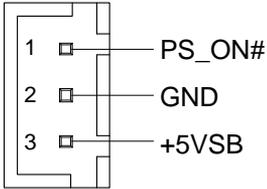


Pin	Pin Name	Signal Type	Signal Level
1	PS_ON#	OUT	+5V
2	GND	GND	
3	+5VSB	PWR	+5V

2.20 External +12V Input Connector (CN5)

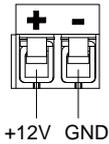


Pin	Pin Name	Signal Type	Signal Level
1	+12V	PWR	+12V
2	GND	GND	

2.21 Front Panel Connector (CN6)

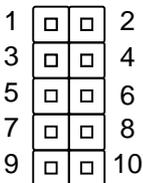

Pin	Pin Name	Signal Type	Signal Level
1	PWR_BTN-		
2	PWR_BTN+		
3	HDD_LED-		
4	HDD_LED+		
5	SPEAKER-		
6	SPEAKER+		
7	PWR_LED-		
8	PWR_LED+		
9	H/W RESET-		
10	H/W RESET+		


2.22 Digital IO Port Connector (CN7)

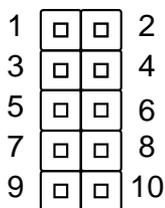

Pin	Pin Name	Signal type	Signal Level
1	DIO0	I/O	+3.3V
2	DIO1	I/O	+3.3V
3	DIO2	I/O	+3.3V
4	DIO3	I/O	+3.3V
5	DIO4	I/O	+3.3V

6	DIO5	I/O	+3.3V
7	DIO6	I/O	+3.3V
8	DIO7	I/O	+3.3V
9	+3.3V	PWR	+3.3V
10	GND	GND	


2.23 LPT Port Connector (CN8)

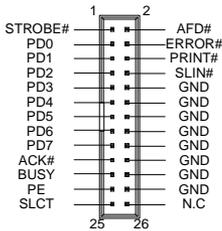

Pin	Pin Name	Signal type	Signal Level
1	STROBE#	IN	
2	AFD#	I/O	
3	PD0	I/O	
4	ERROR#	IN	
5	PD1	I/O	
6	PRINT#	I/O	
7	PD2	I/O	
8	SLIN#	I/O	
9	PD3	I/O	
10	GND	GND	
11	PD4	I/O	

12	GND	GND
13	PD5	I/O
14	GND	GND
15	PD6	I/O
16	GND	GND
17	PD7	I/O
18	GND	GND
19	ACK#	IN
20	GND	GND
21	BUSY	IN
22	GND	GND
23	PE	IN
24	GND	GND
25	SLCT	IN
26	NC	

2.24 COM Port 2 Connector (CN9)

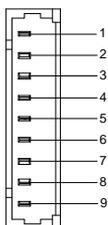

RS-232

Pin	Pin Name	Signal Type	Signal Level
1	DCD	IN	
2	DSR	IN	
3	RX	IN	
4	RTS	OUT	±9V
5	TX	OUT	±9V
6	CTS	IN	
7	DTR	OUT	±9V
8	RI/+5V/+12V	IN/ PWR	+5V/+12V
9	GND	GND	

RS-422


Pin	Pin Name	Signal Type	Signal Level
1	RS422_TX-	OUT	±5V
2	NC		
3	RS422_RX+	IN	
4	NC		
5	RS422_TX+	OUT	±5V
6	NC		
7	RS422_RX-	IN	
8	NC/+5V/+12V	PWR	+5V/+12V
9	GND	GND	

RS-485

Pin	Pin Name	Signal Type	Signal Level
1	RS485_D-	I/O	±5V
2	NC		
3	NC		
4	NC		
5	RS485_D+	I/O	±5V
6	NC		
7	NC		
8	NC/+5V/+12V	PWR	+5V/+12V
9	GND	GND	

Note: COM2 RS-232/422/485 can be set by BIOS setting. Default is RS-232. Pin 8 function can be set by Jumper.


2.25 COM Port 3 Connector (CN10)

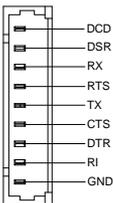

Pin	Pin Name	Signal Type	Signal Level
1	DCD	IN	
2	DSR	IN	
3	RX	IN	


4	RTS	OUT	±9V
5	TX	OUT	±9V
6	CTS	IN	
7	DTR	OUT	±9V
8	RI	IN	
9	GND	GND	

2.26 COM Port 4 Connector (CN11)

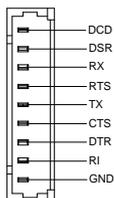


Pin	Pin Name	Signal Type	Signal Level
1	DCD	IN	
2	DSR	IN	
3	RX	IN	
4	RTS	OUT	±9V
5	TX	OUT	±9V
6	CTS	IN	
7	DTR	OUT	±9V
8	RI	IN	
9	GND	GND	

2.27 USB 2.0 Ports 7 Connector (CN12)

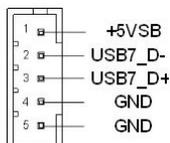


Pin	Pin Name	Signal Type	Signal Level
1	+5VSB	PWR	+5V
2	USB7_D-	DIFF	
3	USB7_D+	DIFF	
4	GND	GND	
5	GND	GND	

2.28 USB 2.0 Ports 8 Connector (CN13)

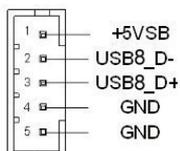


Pin	Pin Name	Signal Type	Signal Level
1	+5VSB	PWR	+5V
2	USB8_D-	DIFF	
3	USB8_D+	DIFF	
4	GND	GND	
5	GND	GND	

2.29 USB 2.0 Ports 5 Connector (CN14)

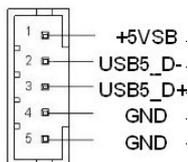


Pin	Pin Name	Signal Type	Signal Level
1	+5VSB	PWR	+5V
2	USB5_D-	DIFF	
3	USB5_D+	DIFF	
4	GND	GND	
5	GND	GND	

2.30 USB 2.0 Ports 6 Connector (CN15)

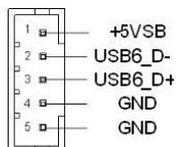


Pin	Pin Name	Signal Type	Signal Level
1	+5VSB	PWR	+5V
2	USB6_D-	DIFF	
3	USB6_D+	DIFF	
4	GND	GND	
5	GND	GND	

2.31 USB 2.0 Ports 3 Connector (CN16)

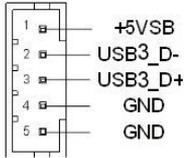


Pin	Pin Name	Signal Type	Signal Level
1	+5VSB	PWR	+5V
2	USB3_D-	DIFF	
3	USB3_D+	DIFF	
4	GND	GND	
5	GND	GND	

2.32 USB 2.0 Ports 4 Connector (CN17)

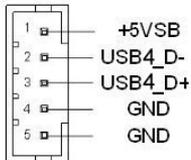


Pin	Pin Name	Signal Type	Signal Level
1	+5VSB	PWR	+5V
2	USB4_D-	DIFF	
3	USB4_D+	DIFF	
4	GND	GND	
5	GND	GND	

2.33 Audio I/O Port Connector (CN18)

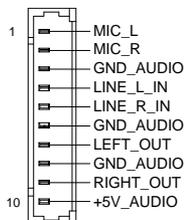


Pin	Pin Name	Signal Type	Signal Level
1	MIC_L	IN	
2	MIC_R	IN	
3	GND_AUDIO	GND	
4	LINE_L_IN	IN	
5	LINE_R_IN	IN	
6	GND_AUDIO	GND	
7	LEFT_OUT	OUT	
8	GND_AUDIO	GND	
9	RIGHT_OUT	OUT	
10	+5V_AUDIO	PWR	+5V

2.34 SATA Port1 Connector (CN19)

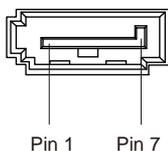


Pin	Pin Name	Signal Type	Signal Level
1	GND	GND	
2	SATA_TX+	DIFF	
3	SATA_TX-	DIFF	
4	GND	GND	
5	SATA_RX-	DIFF	
6	SATA_RX+	DIFF	
7	GND	GND	

2.35 SATA Port2 Connector (CN20)

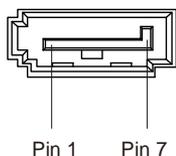


Pin	Pin Name	Signal Type	Signal Level
1	GND	GND	
2	SATA_TX+	DIFF	
3	SATA_TX-	DIFF	
4	GND	GND	
5	SATA_RX-	DIFF	
6	SATA_RX+	DIFF	
7	GND	GND	

2.36 +5V Output for SATA HDD Connector (CN21)

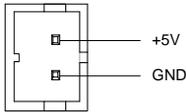

Pin	Pin Name	Signal Type	Signal Level
1	+5V	PWR	+5V
2	GND	GND	


2.37 LVDS Inverter / Backlight Connector (CN22)

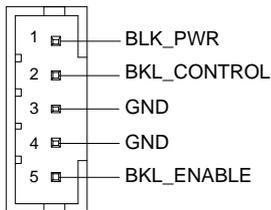

Pin	Pin Name	Signal Type	Signal Level
1	BKL_PWR	PWR	+5V / +12V
2	BKL_CONTROL	OUT	
3	GND	GND	
4	GND	GND	
5	BKL_ENABLE	OUT	+5V

Note: LVDS BKL_PWR can be set to +5V or +12V by JP8. LVDS BKL_CONTROL can be set by JP7.

2.38 LVDS Port Connector (CN23)

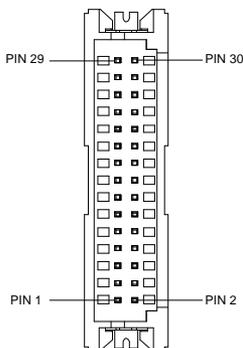


Pin	Pin Name	Signal Type	Signal Level
1	BKL_ENABLE	OUT	
2	BKL_CONTROL	OUT	
3	LCD_PWR	PWR	+3.3V/+5V
4	GND	GND	
5	LVDS_A_CLK-	DIFF	
6	LVDS_A_CLK+	DIFF	
7	LCD_PWR	PWR	+3.3V/+5V
8	GND	GND	
9	LVDS_DA0-	DIFF	
10	LVDS_DA0+	DIFF	
11	LVDS_DA1-	DIFF	
12	LVDS_DA1+	DIFF	
13	LVDS_DA2-	DIFF	

14	LVDS_DA2+	DIFF	
15	LVDS_DA3-	DIFF	
16	LVDS_DA3+	DIFF	
17	DDC_DATA	I/O	+3.3V
18	DDC_CLK	I/O	+3.3V
19	LVDS_DB0-	DIFF	
20	LVDS_DB0+	DIFF	
21	LVDS_DB1-	DIFF	
22	LVDS_DB1+	DIFF	
23	LVDS_DB2-	DIFF	
24	LVDS_DB2+	DIFF	
25	LVDS_DB3-	DIFF	
26	LVDS_DB3+	DIFF	
27	LCD_PWR	PWR	+3.3V/+5V
28	GND	GND	
29	LVDS_B_CLK-	DIFF	
30	LVDS_B_CLK+	DIFF	


Note: LVDS LCD_PWR can be set to +3.3V or +5V by JP6.

2.39 COM Port 1 (D-SUB 9) Connector (CN24)

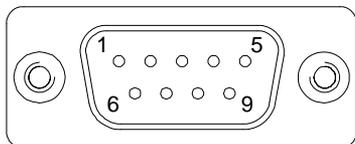

Pin	Pin Name	Signal Type	Signal Level
1	DCD	IN	
2	RX	IN	
3	TX	OUT	±9V
4	DTR	OUT	±9V
5	GND	GND	
6	DSR	IN	
7	RTS	OUT	±9V
8	CTS	IN	
9	RI	IN	


2.40 Realtek LAN (RJ-45) Port2 Connector (CN25)

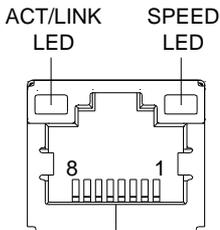

Pin	Pin Name	Signal Type	Signal Level
1	MDIO+	DIFF	
2	MDIO-	DIFF	
3	MDI1+	DIFF	
4	MDI2+	DIFF	
5	MDI2-	DIFF	
6	MDI1-	DIFF	


7	MDI3+	DIFF
8	MDI3-	DIFF

2.41 Realtek LAN (RJ-45) Port1 Connector (CN26)

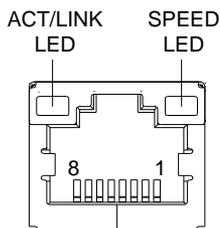


Pin	Pin Name	Signal Type	Signal Level
1	MDI0+	DIFF	
2	MDI0-	DIFF	
3	MDI1+	DIFF	
4	MDI2+	DIFF	
5	MDI2-	DIFF	
6	MDI1-	DIFF	
7	MDI3+	DIFF	
8	MDI3-	DIFF	

2.42 USB Port 1 and 2 Connector (CN27)

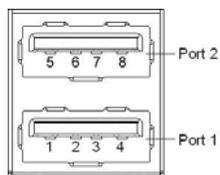

Pin	Pin Name	Signal Type	Signal Level
1	+5VSB	PWR	+5V
2	USB1_D-	DIFF	
3	USB1_D+	DIFF	
4	GND	GND	
5	+5VSB	PWR	+5V
6	USB2_D-	DIFF	
7	USB2_D+	DIFF	
8	GND	GND	


2.43 HDMI Port Connector (CN28)

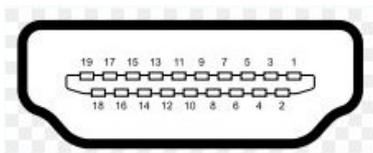

Pin	Pin Name	Signal Type	Signal Level
1	TMDS_Data2+	DIFF	
2	GND	GND	
3	TMDS_Data2-	DIFF	
4	TMDS_Data1+	DIFF	
5	GND	GND	
6	TMDS_Data1-	DIFF	
7	TMDS_Data0+	DIFF	
8	GND	GND	


9	TMDS_Data0-	DIFF	
10	TMDS_Clock+	DIFF	
11	GND	GND	
12	TMDS_Clock-	DIFF	
13	CEC		
14	NC		
15	SCL	I/O	+3.3V
16	SDA	I/O	+3.3V
17	GND		
18	+5V	PWR	+5V
19	HPLG_DETECT	IN	

2.44 PS/2 Keyboard/Mouse Combo Port Connector (CN29)

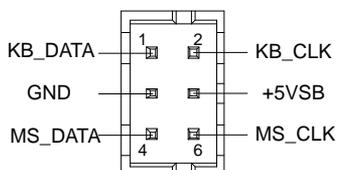


Pin	Pin Name	Signal Type	Signal Level
1	KB_DATA	I/O	+5V
2	KB_CLK	I/O	+5V
3	GND	GND	
4	+5VSB	PWR	+5V
5	MS_DATA	I/O	+5V
6	MS_CLK	I/O	+5V

2.45 VGA Port Connector (CN30)

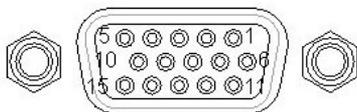

Pin	Pin Name	Signal Type	Signal Level
1	RED	OUT	
2	GREEN	OUT	
3	BLUE	OUT	
4	NC		
5	GND	GND	
6	RED_GND_RTN	GND	
7	GREEN_GND_RTN	GND	
8	BLUE_GND_RTN	GND	
9	+5V	PWR	+5V
10	GND	GND	
11	NC		
12	DDC_DATA	I/O	+5V
13	HSYNC	OUT	
14	VSYNC	OUT	
15	DDC_CLK	I/O	+5V

2.46 UIM Card Module Connector (CN32)

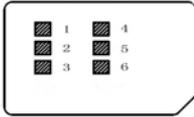

Pin	Pin Name	Signal Type	Signal Level
1	UIM_PWR	PWR	
2	UIM_RST	IN	
3	UIM_CLK	IN	
4	GND	GND	
5	UIM_VPP	PWR	
6	UIM_DATA	I/O	

2.47 DDR3 SODIMM Slot (SO-DIMM1)

Standard specification

2.48 CFast Slot (CFDA1)

Pin	Pin Name	Signal Type	Signal Level
S1	GND	GND	
S2	SATA_TX+	DIFF	
S3	SATA_TX-	DIFF	
S4	GND	GND	
S5	SATA_RX-	DIFF	
S6	SATA_RX+	DIFF	
S7	GND	GND	

PC1	NC		
PC2	GND	GND	
PC3	NC		
PC4	NC		
PC5	NC		
PC6	NC		
PC7	GND	GND	
PC8	NC		
PC9	NC		
PC10	NC		
PC11	NC		
PC12	NC		
PC13	+3.3V	PWR	+3.3V
PC14	+3.3V	PWR	+3.3V
PC15	GND	GND	
PC16	GND	GND	
PC17	NC		

2.49 Mini-Card Slot (PCIEA1)

Pin	Pin Name	Signal Type	Signal Level
1	PCIE_WAKE#	IN	
2	+3.3VSB	PWR	+3.3V
3	NC		
4	GND	GND	

5	NC		
6	+1.5V	PWR	+1.5V
7	PCIE_CLK_REQ#	IN	
8	UIM_PWR	PWR	
9	GND	GND	
10	UIM_DATA	I/O	
11	PCIE_REF_CLK-	DIFF	
12	UIM_CLK	IN	
13	PCIE_REF_CLK+	DIFF	
14	UIM_RST	IN	
15	GND	GND	
16	UIM_VPP	PWR	
17	NC		
18	GND	GND	
19	NC		
20	W_DISABLE#	OUT	+3.3V
21	GND	GND	
22	PCIE_RST#	OUT	+3.3V
23	PCIE_RX-	DIFF	
24	+3.3VSB	PWR	+3.3V
25	PCIE_RX+	DIFF	
26	GND	GND	
27	GND	GND	
28	+1.5V	PWR	+1.5V

29	GND	GND	
30	SMB_CLK	I/O	+3.3V
31	PCIE_TX-	DIFF	
32	SMB_DATA	I/O	+3.3V
33	PCIE_TX+	DIFF	
34	GND	GND	
35	GND	GND	
36	USB_D-	DIFF	
37	GND	GND	
38	USB_D+	DIFF	
39	+3.3VSB	PWR	+3.3V
40	GND	GND	
41	+3.3VSB	PWR	+3.3V
42	NC		
43	GND	GND	
44	NC		
45	NC		
46	NC		
47	NC		
48	+1.5V	PWR	+1.5V
49	NC		
50	GND	GND	
51	NC		
52	+3.3VSB	PWR	+3.3V

Below Table for China RoHS Requirements

产品中有毒有害物质或元素名称及含量

AAEON Main Board/ Daughter Board/ Backplane

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印刷电路板 及其电子组件	×	○	○	○	○	○
外部信号 连接器及线材	×	○	○	○	○	○
<p>O: 表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T 11363-2006 标准规定的限量要求以下。</p> <p>X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T 11363-2006 标准规定的限量要求。</p> <p>备注: 此产品所标示之环保使用期限, 系指在一般正常使用状况下。</p>						

Chapter

3

AMI BIOS Setup

3.1 System Test and Initialization

These routines test and initialize board hardware. If the routines encounter an error during the tests, you will either hear a few short beeps or see an error message on the screen. There are two kinds of errors: fatal and non-fatal. The system can usually continue the boot up sequence with non-fatal errors.

System configuration verification

These routines check the current system configuration against the values stored in the CMOS memory. If they do not match, the program outputs an error message. You will then need to run the BIOS setup program to set the configuration information in memory.

There are three situations in which you will need to change the CMOS settings:

1. You are starting your system for the first time
2. You have changed the hardware attached to your system
3. The CMOS memory has lost power and the configuration information has been erased.

The GENE-HD05 CMOS memory has an integral lithium battery backup for data retention. However, you will need to replace the complete unit when it finally runs down.

3.2 AMI BIOS Setup

AMI BIOS ROM has a built-in Setup program that allows users to modify the basic system configuration. This type of information is stored in battery-backed CMOS RAM so that it retains the Setup information when the power is turned off.

Entering Setup

Power on the computer and press or <F2> immediately. This will allow you to enter Setup.

Main

Set the date, use tab to switch between date elements.

Advanced

Advanced BIOS Features Setup including TPM, ACPI, etc.

Chipset

Host bridge parameters.

Boot

Enables/disable quiet boot option.

Security

Set setup administrator password.

Save&Exit

Exit system setup after saving the changes.

Setup Menu

Setup submenu: Main



Options summary: (**default setting**)


System Date	Day MM:DD:YYYY	
Change the month, year and century. The 'Day' is changed automatically.		
System Time	HH : MM : SS	
Change the clock of the system.		

Setup submenu: Advanced

Options summary: (**default setting**)

ACPI Settings		
System ACPI Parameters		
CPU Configuration		
CPU Configuration Parameters		
SATA Configuration		
SATA Device Options Settings		
USB Configuration		
USB Configuration Parameters		
F81866 Super IO Configuration		
System Super IO Chip Parameters		
F81866 H/W Monitor		
Monitor hardware status		


ACPI Settings

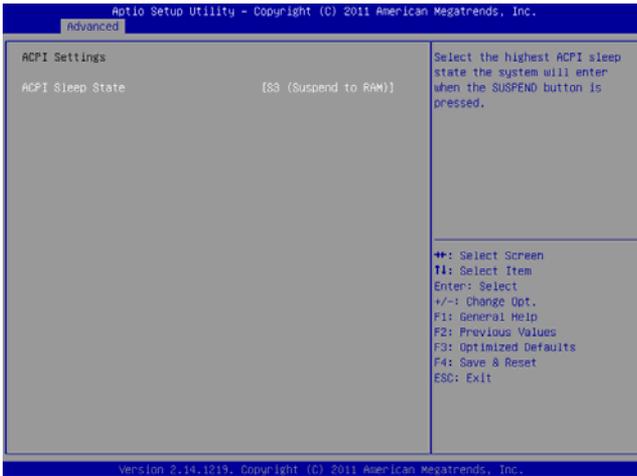


Options summary: (**default setting**)

ACPI Sleep State	S3 (Suspend to RAM)	
Select the highest ACPI sleep state the system will enter when the SUSPEND button is pressed.		

CPU Configuration

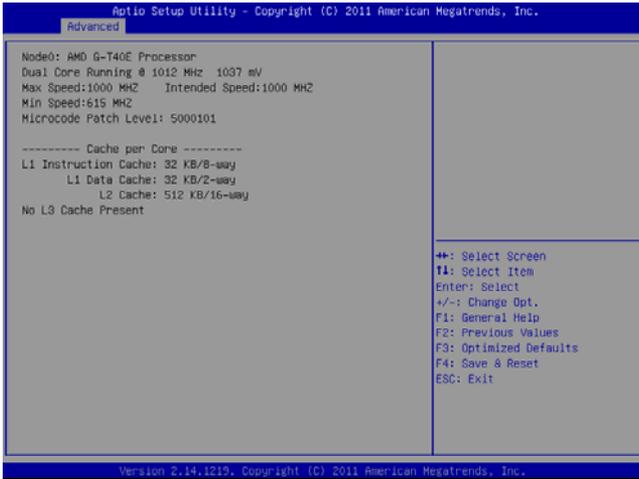


SATA Configuration

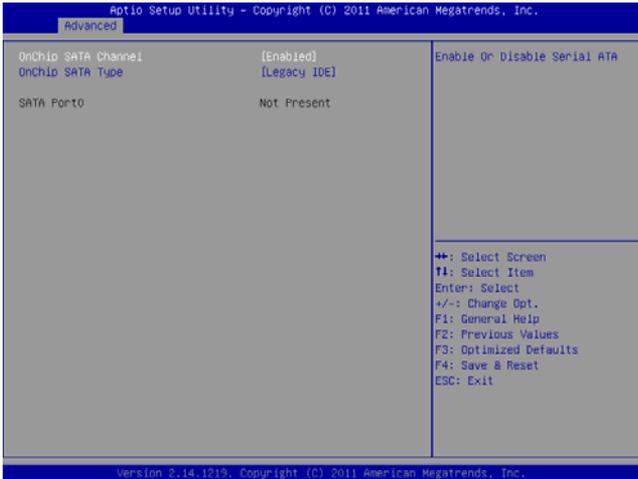

Options summary: (**default setting**)

OnChip SATA Channel	Disabled	
	Enabled	
En/Disable Serial ATA		
OnChip SATA Type	ACHI	
	Legacy IDE	
Configure SATA controller operating as Legacy IDE/AHCI mode.		

USB Configuration

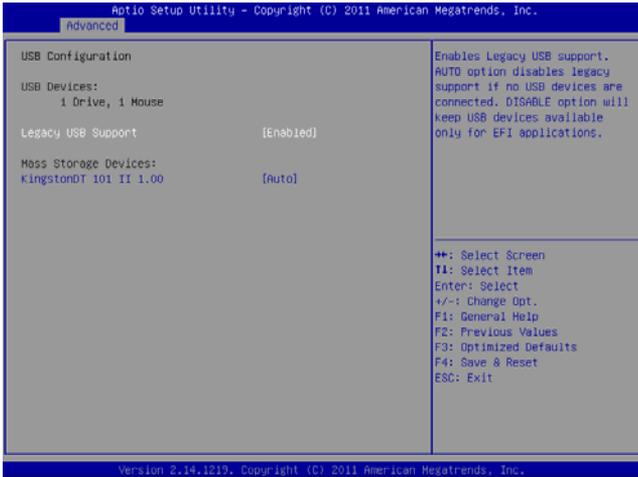


Options summary: (**default setting**)

Legacy USB Support	Enabled	
	Disabled	
	Auto	
Enables Legacy USB Support. AUTO option disables legacy support if no USB devices are connected. DISABLE option will keep USB devices available only for EFI applications		
Device Name (Emulation Type)	Auto	
	Floppy	
	Forced FDD	
	Hard Disk	
	CD-ROM	

If Auto. USB devices less than 530MB will be emulated as Floppy and remaining as Floppy and remaining as hard drive. Forced FDD option can be used to force a HDD formatted drive to boot as FDD(Ex. ZIP drive)


F81866 Super IO Configuration

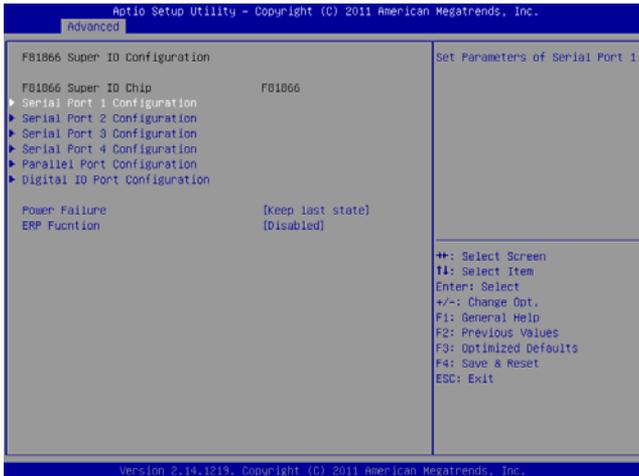Options summary: (**default setting**)

Serial Port 1/2/3/4 Configuration		
Set Parameters of Serial Port 1/2/3/4		
Parallel Port Configuration		
Set Parameters of Parallel Port		
Digital IO Port Configuration		
Set Input / Output of Digital IO Port Configuration		
Power Failure	Keep last state	
	Always on	
	Always off	
Select AC power state when power is re-applied after a power failure.		

ERP Function	<i>Disabled</i>	
	Enabled	
ERP Function En/Disable		

Serial Port 1 Configuration

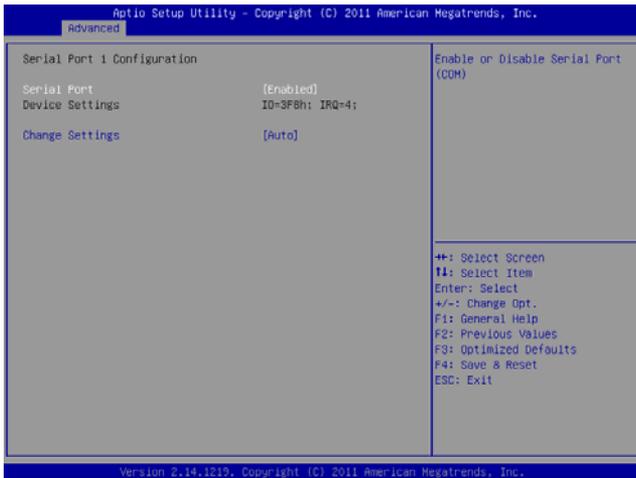Options summary: (**default setting**)


Serial Port	Disabled	
	Enabled	
En/Disable specified serial port.		
Change Settings	Auto	
	IO=3F8h; IRQ=4;	
	IO=3F8h; IRQ=3,4;	
	IO=2F8h; IRQ=3,4;	
Select an optimal setting for Super IO device.		

Serial Port 2 Configuration

Options summary: (**default setting**)

Serial Port	Disabled	
	Enabled	
En/Disable specified serial port.		
Change Settings	Auto	
	IO=2F8h; IRQ=3;	
	IO=3F8h; IRQ=3,4;	
	IO=2F8h; IRQ=3,4;	
Select an optimal setting for Super IO device.		
RS232/422,485	RS232	
	RS422	
	RS485	
RS232/422,485 switch		

Serial Port 3 Configuration

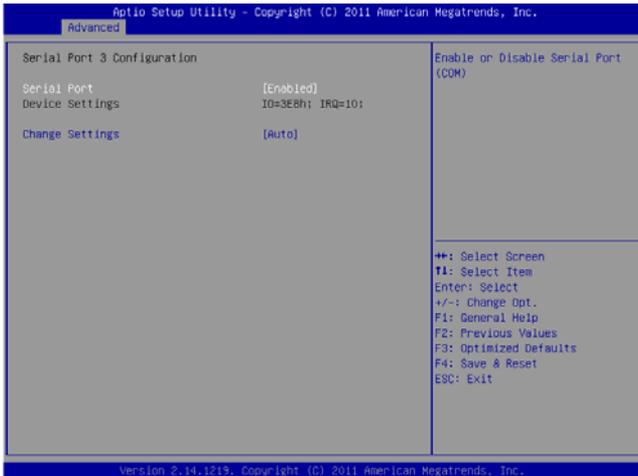Options summary: (**default setting**)


Serial Port	Disabled	
	Enabled	
En/Disable specified serial port.		
Change Settings	Auto	
	IO=3E8h; IRQ=11;	
	IO=3E8h; IRQ=11;	
	IO=2E8h; IRQ=11;	
Select an optimal setting for Super IO device.		

Serial Port 4 Configuration

Options summary: (**default setting**)

Serial Port	Disabled	
	Enabled	
En/Disable specified serial port.		
Change Settings	Auto	
	IO=2E8h; IRQ=11;	
	IO=3E8h; IRQ=11;	
	IO=2E8h; IRQ=11;	
Select an optimal setting for Super IO device.		

Parallel Port Configuration

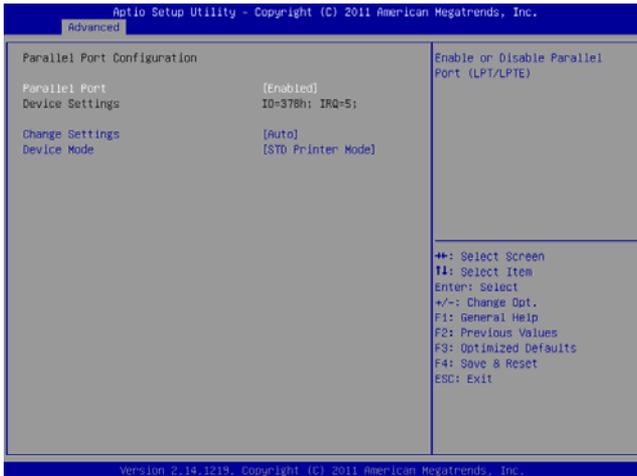

Options summary: (**default setting**)

Parallel Port	Disabled	
	Enabled	
En/Disable specified parallel port.		
Change Settings	Auto	
	IO=378h; IRQ=5;	
	IO=378h; IRQ=5,6,7,10,11,12;	
	IO=278h; IRQ=5,6,7,10,11,12;	
	IO=3BCh; IRQ=5,6,7,10,11,12;	
Select an optimal setting for Super IO device.		

Device Mode	<i>STD Printer Mode</i>	
	SPP Mode	
	EPP-1.9 and SPP Mode	
	EPP-1.7 and SPP Mode	
	ECP Mode	
	ECP and EPP 1.9 Mode	
	ECP and EPP 1.7 Mode	
Change the Printer Port mode		

Digital IO Port Configuration



Options summary: (**default setting**)

Port 1	Input	
	Output	
Set GPIO as Input or Output.		
Port 2	Input	
	Output	
Set GPIO as Input or Output.		
Port 3	Input	
	Output	
Set GPIO as Input or Output.		
Port 4	Input	
	Output	
Set GPIO as Input or Output.		

Port 5	Input	
	Output	
Set GPIO as Input or Output.		
Port 6	Input	
	Output	
Set GPIO as Input or Output.		
Port 7	Input	
	Output	
Set GPIO as Input or Output.		
Port 8	Input	
	Output	
Set GPIO as Input or Output.		
Power Failure	Keep last state	
	Always on	
	Always off	
F81866 Power Failure		
ERP Function	Disabled	
	Enabled	
ERP Function Enable / Disable		

F81866 H/W Monitor




Setup submenu: Chipset

Options summary: (**default setting**)

North Bridge		
South Bridge Parameters		
South Bridge		
South Bridge Parameters		


North Bridge

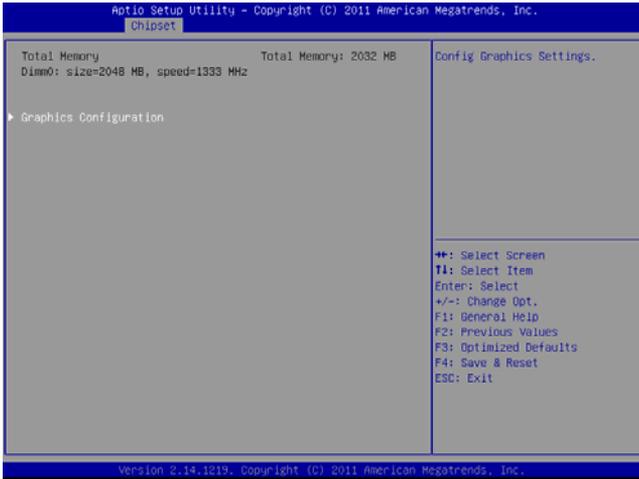

Options summary: (*default setting*)

Graphics Configuration		
Configure Graphics Settings.		

Graphics Configuration

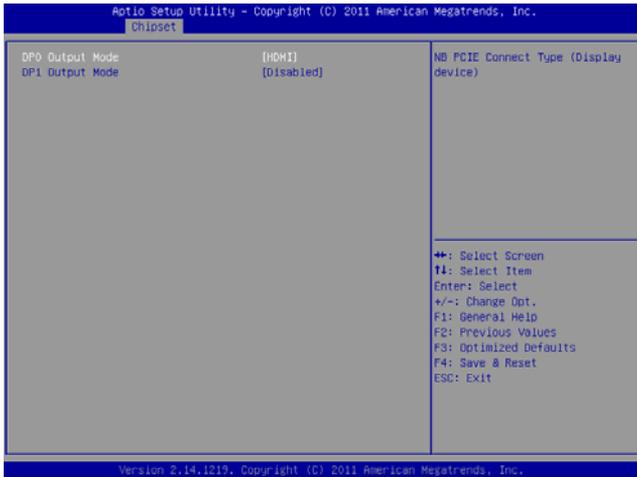

Options summary: (**default setting**)

DP0 Output	HDMI	
	Disabled	
NB PCIE Connect Type (Display device)		
DP1 Output	LVDS	
	Disabled	
NB PCIE Connect Type (Display device)		


South Bridge



Options summary: (default setting)


Power Mode	ATX Type	
	AT Type	
Select power supply mode.		
MiniCard & msata Configuration	Minicard	
	mSATA	
Support MiniCard & msata Device		
SB HD Azalia Configuration		
Options for SB HD Azalia.		

SB HD Azalia Configuration

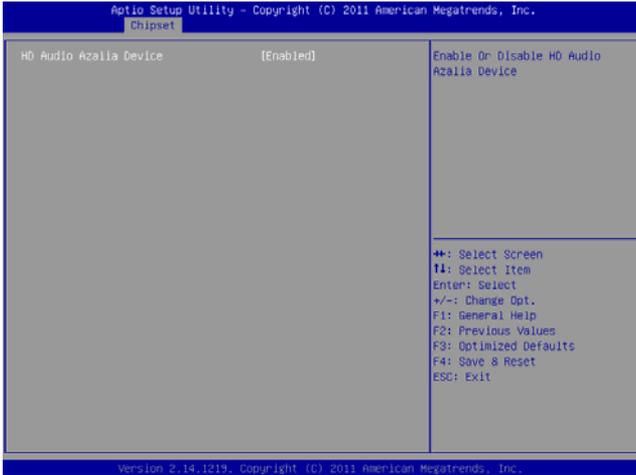Options summary: (**default setting**)

HD Audio Azalia Device	Auto	
	Disabled	
	Enabled	
Enable Or Disable HD Audio Azalia Device		

Setup submenu: Boot

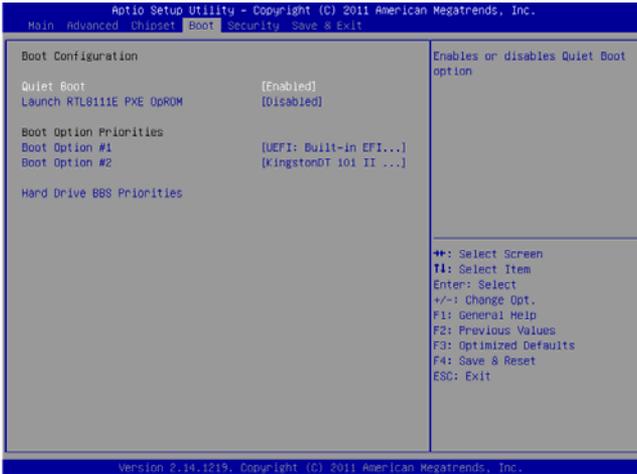Options summary: (**default setting**)

Quiet Boot	Disabled	
	Enabled	
En/Disable showing boot logo.		
Launch RTL8111E PXE OpROM.	Disabled	
	Enabled	
En/Disable PXE boot for RTL8111E LAN		
Boot Option #x		
Set the system boot order.		
Hard Drive BBS Priorities		
Set the order of the legacy devices in this group		

Setup submenu: Security

Options summary: (**default setting**)

Administrator Password/	Not set	
User Password		

You can install a Supervisor password, and if you install a supervisor password, you can then install a user password. A user password does not provide access to many of the features in the Setup utility.


Install the Password:

Press Enter on this item, a dialog box appears which lets you enter a password. You can enter no more than six letters or numbers. Press Enter after you have typed in the password. A second dialog box asks you to retype the password for confirmation. Press Enter after you have retyped it correctly. The password is required at boot time, or when the user enters the Setup utility.

Removing the Password:

Highlight this item and type in the current password. At the next dialog box press Enter to disable password protection.

Setup submenu: Save & Exit

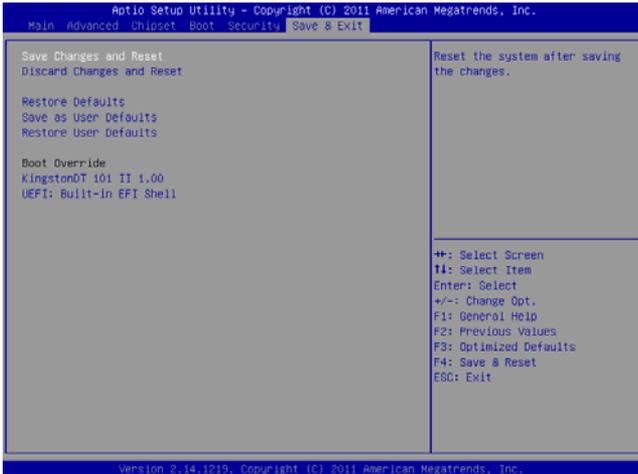Options summary: (**default setting**)

Save Changes and Reset		
Reset the system after saving the changes		
Discard Changes and Reset		
Reset system setup without saving any changes		
Restore Defaults		
Restore/Load Default values for all the setup options.		
Save as User Defaults		
Save the changes done so far as User Defaults		
Restore User Defaults		
Restore the User Defaults to all the setup options		

Chapter

4

**Driver
Installation**

The GENE-HD05 comes with a DVD-ROM that contains all drivers and utilities that meet your needs.

Follow the sequence below to install the drivers:

- Step 1 – Install Chipset Driver
- Step 2 – Install LAN Driver
- Step 3 – Install Audio Driver
- Step 4 – Install AHCI Driver
- Step 5 – Install Touch Driver
- Step 6 – Install TPM Driver

Please read instructions below for further detailed installations.

4.1 Installation:

Insert the GENE-HD05 DVD-ROM into the DVD-ROM Drive. And install the drivers from Step 1 to Step 6 in order.

Step 1 – Install Chipset Driver

1. Click on the **STEP1-CHIPSET** folder and select the OS folder your system is
2. Double click on the **Setup.exe** located in each OS folder
3. Follow the instructions that the window shows
4. The system will help you install the driver automatically

Step 2 – Install LAN Driver

1. Click on the **STEP2-LAN** folder and select the OS folder your system is
2. Double click on the **setup.exe** located in each OS folder
3. Follow the instructions that the window shows
4. The system will help you install the driver automatically

Step 3 – Install Audio Driver

1. Click on the **STEP3-AUDIO** folder and select the OS folder your system is
2. Double click on the **Setup.exe** located in each OS folder
3. Follow the instructions that the window shows
4. The system will help you install the driver automatically

Step 4 – Install AHCI Driver

Please refer to the Appendix D AHCI Setting

Step 5 – Install Touch Driver

1. Click on the **STEP5-TOUCH** folder and double click on the **Setup.exe**
2. Follow the instructions that the window shows
3. The system will help you install the driver automatically

Step 6 – Install TPM Driver

1. Click on the **STEP6-TPM** folder and select the OS folder your system is
2. Double click on the **Setup.exe** file located in each OS folder
3. Follow the instructions that the window shows
4. The system will help you install the driver automatically

Appendix

A


Programming the Watchdog Timer

A.1 Programming

GENE-HD05 utilizes FINTEK 81866 chipset as its watchdog timer controller. Below are the procedures to complete its configuration and the AAEON initial watchdog timer program is also attached based on which you can develop customized program to fit your application.

Configuring Sequence Description

After the hardware reset or power-on reset, the FINTEK 81866 enters the normal mode with all logical devices disabled except KBC. The initial state (enable bit) of this logical device (KBC) is determined by the state of pin 121 (DTR1#) at the falling edge of the system reset during power-on reset.

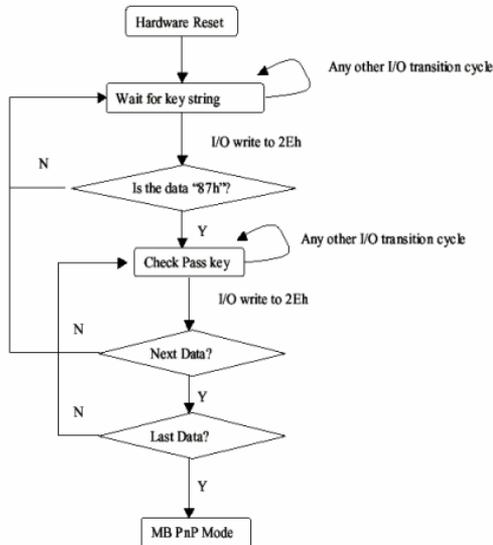

There are three steps to complete the configuration setup: (1) Enter the MB PnP Mode; (2) Modify the data of configuration registers; (3) Exit the MB PnP Mode. Undesired result may occur if the MB PnP Mode is not exited normally.

(1) Enter the MB PnP Mode

To enter the MB PnP Mode, four special I/O write operations are to be performed during Wait for Key state. To ensure the initial state of the key-check logic, it is necessary to perform four write operations to the Special Address port (2EH). Two different enter keys are provided to select configuration ports (2Eh/2Fh) of the next step.

-o 4e 87

-o 4e 87 (enable configuration)

(2) Modify the Data of the Registers

All configuration registers can be accessed after entering the MB PnP Mode. Before accessing a selected register, the content of Index 07h must be changed to the LDN to which the register belongs, except some Global registers.

(3) Exit the MB PnP Mode

Write exit key 0xAA to the index port.

-o 4e aa (disable configuration)

Watch Dog Timer 1, 2, 3 Control Register (Index=F5h,F6h,FAh Default=00h)

7.8.4 Watchdog Control Configuration Register 1 — Index F5h

Bit	Name	R/W	Reset	Default	Description
7	Reserved	R	-	0	Reserved
6	WDTMOUT_STS	R/W	5VSB	0	If watchdog timeout event occurred, this bit will be set to 1. Write a 1 to this bit will clear it to 0.
5	WD_EN	R/W	5VSB	0	If this bit is set to 1, the counting of watchdog time is enabled.
4	WD_PULSE	R/W	5VSB	0	Select output mode (0: level, 1: pulse) of RSTOUT# by setting this bit.
3	WD_UNIT	R/W	5VSB	0	Select time unit (0: 1sec, 1: 60 sec) of watchdog timer by setting this bit.
2	WD_HACTIVE	R/W	5VSB	0	Select output polarity of RSTOUT# (1: high active, 0: low active) by setting this bit.
1-0	WD_PSWIDTH	R/W	5VSB	0	Select output pulse width of RSTOUT# 0: 1 ms 1: 25 ms 2: 125 ms 3: 5 sec

7.8.5 Watchdog Timer Configuration Register 2 — Index F6h

Bit	Name	R/W	Reset	Default	Description
7-0	WD_TIME	R/W	5VSB	0	Time of watchdog timer (0-255)

7.8.6 Watchdog PME Enable Configuration Register 2 — Index FAh

Bit	Name	R/W	Reset	Default	Description
7	WDT_PME	R	5VSB	0	0: No WDT PME occurred. 1: WDT PME occurred. The WDT PME is occurred one unit before WDT timeout.
6	WDT_PME_EN	R/W	5VSB	0	0: Disable Watchdog PME. 1: enable Watchdog PME.
5	Reserved	R	-	0	Reserved
4	WDT_CLK_SEL	R/W	5VSB	1	WDT Clock Source Select 0: Internal 1KHz clock. 1: 1KHZ clock driven by CLKIN.
3-1	Reserved	R	-	0	Reserved
0	WDOUT_EN	R/W	5VSB	0	0: disable Watchdog time out output via WDTRST#. 1: enable Watchdog time out output via WDTRST#.

A.2 F81866 Watchdog Timer Initial Program

```
Main(){
```

```
aaeonSuperIOOpen();
```

```
aaeonWdtSetCountMode(BOOL bMinute); // Set wdt count mode
```

```
aaeonWdtSetTimeoutCount(BYTE tTimeout); // Set wdt timer
```

```
aaeonWdtSetEnable(BOOL bEnable); // Enable wdt
```

```
aaeonSuperIOClose();
```

```
}
```

```
Void aaeonSuperIOOpen(){ // Config F81866 Entry key
```

```
    aaeonioWritePortByte(F81866_INDEX, 0x87);
```

```
    aaeonioWritePortByte(F81866_INDEX, 0x87);
```

```
}
```

```
Void aaeonWdtSetCountMode(BOOL bMinute){
```

```
    BYTE WDT_CONTROL = f81866ReadByte(F81866_WDT_CONTROL_REG);
```

```
    if(bMinute)
```

```
        f81866WriteByte(F81866_WDT_CONTROL_REG, WDT_CONTROL | 0x08);
```

```
    else
```

```
        f81866WriteByte(F81866_WDT_CONTROL_REG, WDT_CONTROL & 0xF7);
```

```
}
```

```
Void aaeonWdtSetTimeoutCount(BYTE tTimeout){
    f81866SetLdn(0x07);
    f81866WriteByte(F81866_WDT_TIME_REG, tTimeout);
}

Void aaeonWdtSetEnable(BOOL bEnable){
    f81866SetLdn(0x07);
    if(bEnable){
        f81866WriteByte(0x30, 0x01);
        WDT_BASE_ADDR =
            (f81866ReadByte(F81866_WDT_BASEADDR_REG_MSB) << 8)
            | f81866ReadByte(F81866_WDT_BASEADDR_REG_LSB);
        WDT_STATUS = f81866ReadByte(F81866_WDT_CONTROL_REG);
        f81866WriteByte(F81866_WDT_CONTROL_REG, WDT_STATUS | 0x20);
        WDT_STATUS = f81866ReadByte(F81866_WDT_PME_REG);
        f81866WriteByte(F81866_WDT_PME_REG, WDT_STATUS | 0x01);
    }else{
        f81866WriteByte(0x30, 0x00);
        WDT_BASE_ADDR = 0;
        WDT_STATUS = f81866ReadByte(F81866_WDT_CONTROL_REG);
        f81866WriteByte(F81866_WDT_CONTROL_REG, WDT_STATUS & 0xDF);
        WDT_STATUS = f81866ReadByte(F81866_WDT_PME_REG);
        f81866WriteByte(F81866_WDT_PME_REG, WDT_STATUS & 0xFE);
    }
}
```

```
Void aaeonSuperIOClose(){  
    aaeonioWritePortByte(F81866_INDEX, 0xaa);  
}
```

Appendix

B

I/O Information

B.1 I/O Address Map

Input/output (IO)	
	[00000000 - 0000000F] Direct memory access controller
	[00000000 - 0000000F] Motherboard resources
	[00000000 - 000003AF] PCI bus
	[00000010 - 0000001F] Motherboard resources
	[00000020 - 00000021] Programmable interrupt controller
	[00000022 - 0000003F] Motherboard resources
	[00000040 - 00000043] System timer
	[00000044 - 0000005F] Motherboard resources
	[00000060 - 00000060] Standard 101/102-Key or Microsoft Natural PS/2 Keyboard
	[00000061 - 00000061] System speaker
	[00000062 - 00000063] Motherboard resources
	[00000064 - 00000064] Standard 101/102-Key or Microsoft Natural PS/2 Keyboard
	[00000065 - 0000006F] Motherboard resources
	[00000070 - 00000071] System CMOS/real time clock
	[00000072 - 0000007F] Motherboard resources
	[00000080 - 00000080] Motherboard resources
	[00000081 - 00000083] Direct memory access controller
	[00000084 - 00000086] Motherboard resources
	[00000087 - 00000087] Direct memory access controller
	[00000088 - 00000088] Motherboard resources
	[00000089 - 0000008B] Direct memory access controller
	[0000008C - 0000008E] Motherboard resources
	[0000008F - 0000008F] Direct memory access controller
	[00000090 - 0000009F] Motherboard resources
	[000000A0 - 000000A1] Programmable interrupt controller
	[000000A2 - 000000BF] Motherboard resources
	[000000C0 - 000000DF] Direct memory access controller
	[000000E0 - 000000EF] Motherboard resources
	[000000F0 - 000000FF] Numeric data processor
	[00000170 - 00000177] Secondary IDE Channel
	[000001F0 - 000001F7] Primary IDE Channel
	[00000274 - 00000277] ISAPNP Read Data Port
	[00000279 - 00000279] ISAPNP Read Data Port
	[000002E8 - 000002EF] Communications Port (COM4)
	[000002F8 - 000002FF] Communications Port (COM2)
	[00000376 - 00000376] Secondary IDE Channel

	[00000378 - 0000037F]	Printer Port (LPT1)
	[000003B0 - 000003BB]	AMD Radeon HD 6320 Graphics
	[000003B0 - 000003DF]	PCI bus
	[000003C0 - 000003DF]	AMD Radeon HD 6320 Graphics
	[000003E0 - 00000CF7]	PCI bus
	[000003E8 - 000003EF]	Communications Port (COM3)
	[000003F6 - 000003F6]	Primary IDE Channel
	[000003F8 - 000003FF]	Communications Port (COM1)
	[00000408 - 0000040B]	Motherboard resources
	[000004D0 - 000004D1]	Motherboard resources
	[000004D6 - 000004D6]	Motherboard resources
	[00000500 - 0000050F]	Motherboard resources
	[00000510 - 0000051F]	Motherboard resources
	[00000520 - 0000052F]	Motherboard resources
	[00000800 - 0000089F]	Motherboard resources
	[00000900 - 0000090F]	Motherboard resources
	[00000910 - 0000091F]	Motherboard resources
	[00000A79 - 00000A79]	ISAPNP Read Data Port
	[00000B20 - 00000B3F]	Motherboard resources
	[00000C00 - 00000C01]	Motherboard resources
	[00000C14 - 00000C14]	Motherboard resources
	[00000C50 - 00000C51]	Motherboard resources
	[00000C52 - 00000C52]	Motherboard resources
	[00000C6C - 00000C6C]	Motherboard resources
	[00000C6F - 00000C6F]	Motherboard resources
	[00000CD0 - 00000CD1]	Motherboard resources
	[00000CD2 - 00000CD3]	Motherboard resources
	[00000CD4 - 00000CD5]	Motherboard resources
	[00000CD6 - 00000CD7]	Motherboard resources
	[00000CD8 - 00000CDF]	Motherboard resources
	[00000D00 - 0000FFFF]	PCI bus
	[0000D000 - 0000D0FF]	Realtek PCIe GBE Family Controller #2
	[0000D000 - 0000DFFF]	PCI standard PCI-to-PCI bridge
	[0000E000 - 0000E0FF]	Realtek PCIe GBE Family Controller
	[0000E000 - 0000EFFF]	PCI standard PCI-to-PCI bridge
	[0000F000 - 0000F0FF]	AMD Radeon HD 6320 Graphics
	[0000F100 - 0000F10F]	Standard Dual Channel PCI IDE Controller
	[0000F110 - 0000F113]	Standard Dual Channel PCI IDE Controller
	[0000F120 - 0000F127]	Standard Dual Channel PCI IDE Controller
	[0000F130 - 0000F133]	Standard Dual Channel PCI IDE Controller
	[0000F140 - 0000F147]	Standard Dual Channel PCI IDE Controller
	[0000F150 - 0000F15F]	Standard Dual Channel PCI IDE Controller
	[0000FE00 - 0000FEFE]	Motherboard resources

B.2 1st MB Memory Address Map

Address Range	Device
[000A0000 - 000BFFFF]	AMD Radeon HD 6320 Graphics
[000A0000 - 000BFFFF]	PCI bus
[000C0000 - 000DFFFF]	PCI bus
[2F000000 - 3EFFFFFF]	Motherboard resources
[3F000000 - FFFFFFFF]	PCI bus
[C0000000 - CFFFFFFF]	AMD Radeon HD 6320 Graphics
[D0000000 - D0003FFF]	Realtek PCIe GBE Family Controller #2
[D0000000 - D00FFFFFF]	PCI standard PCI-to-PCI bridge
[D0100000 - D0103FFF]	Realtek PCIe GBE Family Controller
[D0100000 - D01FFFFFF]	PCI standard PCI-to-PCI bridge
[E0000000 - EFFFFFFF]	System board
[FE900000 - FE900FFF]	Realtek PCIe GBE Family Controller #2
[FE900000 - FE9FFFFFF]	PCI standard PCI-to-PCI bridge
[FEA00000 - FEA00FFF]	Realtek PCIe GBE Family Controller
[FEA00000 - FEAFFFFFF]	PCI standard PCI-to-PCI bridge
[FEB00000 - FEB3FFFF]	AMD Radeon HD 6320 Graphics
[FEB40000 - FEB43FFF]	Microsoft UAA Bus Driver for High Definition Audio
[FEB44000 - FEB47FFF]	Microsoft UAA Bus Driver for High Definition Audio
[FEB48000 - FEB480FF]	Standard Enhanced PCI to USB Host Controller
[FEB49000 - FEB49FFF]	Standard OpenHCD USB Host Controller
[FEB4A000 - FEB4AFFF]	Standard OpenHCD USB Host Controller
[FEB4B000 - FEB4B0FF]	Standard Enhanced PCI to USB Host Controller
[FEB4C000 - FEB4CFFF]	Standard OpenHCD USB Host Controller
[FEB4D000 - FEB4D0FF]	Standard Enhanced PCI to USB Host Controller
[FEB4E000 - FEB4EFFF]	Standard OpenHCD USB Host Controller
[FEB4F000 - FEB4F3FF]	Standard Dual Channel PCI IDE Controller
[FEC00000 - FEC00FFF]	Motherboard resources
[FEC10000 - FEC10FFF]	Motherboard resources
[FED00000 - FED003FF]	High precision event timer
[FED00000 - FED00FFF]	Motherboard resources
[FED61000 - FED70FFF]	Motherboard resources
[FED80000 - FED8FFFF]	Motherboard resources
[FEE00000 - FEE00FFF]	Motherboard resources
[FFC00000 - FFFFFFFF]	Motherboard resources

B.3 IRQ Mapping Chart

IRQ	Device
(ISA) 0	System timer
(ISA) 1	Standard 101/102-Key or Microsoft Natural PS/2 Keyboard
(ISA) 3	Communications Port (COM2)
(ISA) 4	Communications Port (COM1)
(ISA) 8	System CMOS/real time clock
(ISA) 9	Microsoft ACPI-Compliant System
(ISA) 10	Communications Port (COM3)
(ISA) 11	Communications Port (COM4)
(ISA) 12	Microsoft PS/2 Mouse
(ISA) 13	Numeric data processor
(ISA) 14	Primary IDE Channel
(PCI) 16	Microsoft UAA Bus Driver for High Definition Audio
(PCI) 16	PCI standard PCI-to-PCI bridge
(PCI) 16	Realtek PCIe GBE Family Controller
(PCI) 17	PCI standard PCI-to-PCI bridge
(PCI) 17	Realtek PCIe GBE Family Controller #2
(PCI) 17	Standard Dual Channel PCI IDE Controller
(PCI) 17	Standard Enhanced PCI to USB Host Controller
(PCI) 17	Standard Enhanced PCI to USB Host Controller
(PCI) 17	Standard Enhanced PCI to USB Host Controller
(PCI) 18	AMD Radeon HD 6320 Graphics
(PCI) 18	Standard OpenHCD USB Host Controller
(PCI) 18	Standard OpenHCD USB Host Controller
(PCI) 18	Standard OpenHCD USB Host Controller
(PCI) 18	Standard OpenHCD USB Host Controller
(PCI) 19	Microsoft UAA Bus Driver for High Definition Audio

B.4 DMA Channel Assignments

DMA Channel	Device
3	Printer Port (LPT1)
4	Direct memory access controller

Appendix

C

Mating Connector

C.1 List of Mating Connectors and Cables

The table notes mating connectors and available cables.

Connector Label	Function	Mating Connector		Available Cable	Cable P/N
		Vendor	Model number		
CN2	Touch Screen Connector	JST	SHR-9V-S-B	N/A	N/A
CN3	CPU Fan Connector	Molex	22-01-2035	N/A	N/A
CN4	External +5VSB Power Input and PS_ON#	JST	PHR-3	ATX Cable	170220020B
CN5	+12V Vin Connector	N/A	N/A	Power Cable	1702002010
CN7	Digital I/O Connector	Neltron	2026B-10	N/A	N/A
CN8	LPT Port	Molex	51110-2650	LPT Cable	1701260201
CN9	COM Port 2 Connector	Molex	51021-0900	Serial Port Cable	1701090150
CN10	COM Port 3 Connector	Molex	51021-0900	Serial Port Cable	1701090150
CN11	COM Port 4 Connector	Molex	51021-0900	Serial Port Cable	1701090150
CN12	USB Port Connector	Molex	51021-0500	USB Wafer Cable	1700050207
CN13	USB Port Connector	Molex	51021-0500	USB Wafer Cable	1700050207
CN14	USB Port Connector	Molex	51021-0500	USB Wafer Cable	1700050207

CN15	USB Port Connector	Molex	51021-0500	USB Wafer Cable	1700050207
CN16	USB Port Connector	Molex	51021-0500	USB Wafer Cable	1700050207
CN17	USB Port Connector	Molex	51021-0500	USB Wafer Cable	1700050207
CN18	Audio Connector	Molex	51021-1000	Audio Cable	1709100254
CN21	+5Vout Connector	JST	PHR-2	2 Pins For HDD Power	1702150155
CN22	LVDS Inverter Connector	JST	PHR-5	N/A	N/A
CN23	LVDS Connector	HIROSE	DF13-30DS-1.25C	N/A	N/A
CN29	P/S2 KB/MS Connector	JST	PHDR-06VS	P/S2 KB/MS Cable	1700060152
BATA1	External RTC Connector	Molex	51021-0200	Battery Cable	175011901C

Appendix

D

AHCI Setting

D.1 Setting AHCI

OS installation to setup AHCI Mode.

Step 1: Copy the files below from “Driver DVD -> STEP4 - AHCI\WinXP\SB8xx_RAID_XP_3.2.1540.92” to Disk




Step 2: Connect the USB Floppy to the board (The board on the photo is just for reference)



Step 3: BIOS Setup menu select “Advanced\OnChip SATA Type -> AHCI”




Step 4: Setup OS

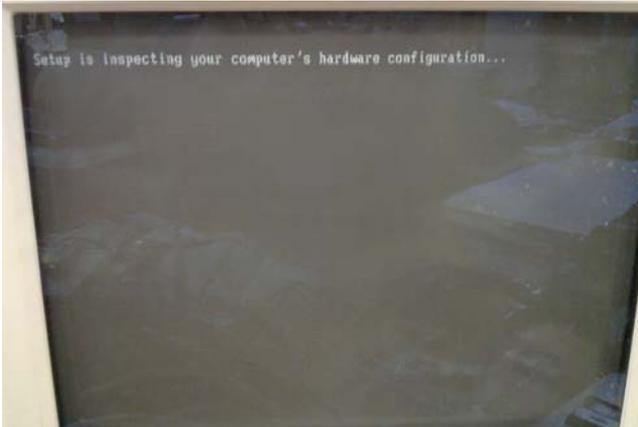


Step 5: Press "F6"



Step 6: Choose "S"

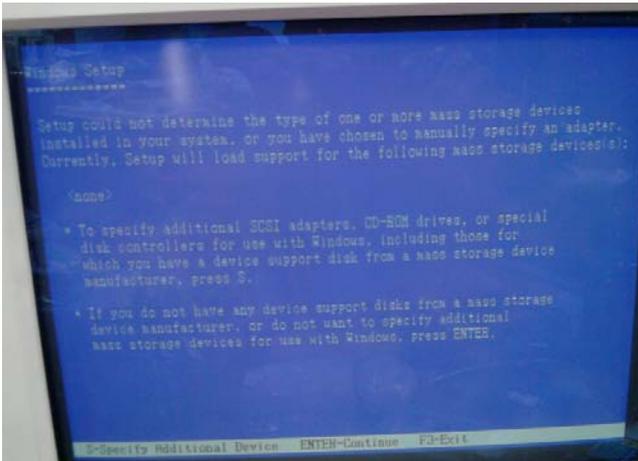

Step 7: Choose “AMD® A50M”

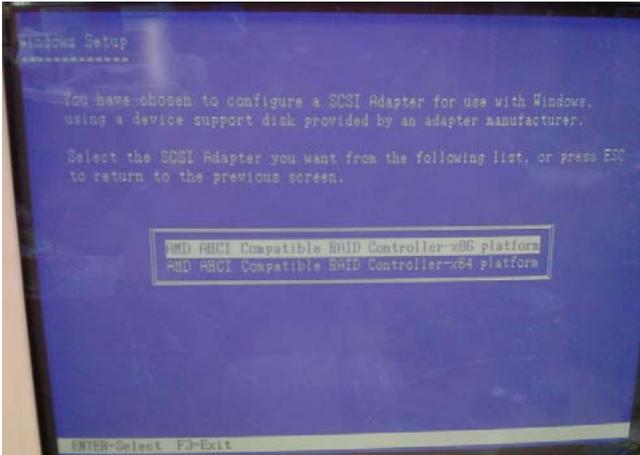

Step 8: It will show the model number you select and then press “ENTER”

Step 9: Setup is loading files



Appendix

D

AHCI Setting

D.1 Setting AHCI

OS installation to setup AHCI Mode.

Step 1: Copy the files below from “Driver DVD -> STEP4 - AHCI\WinXP\SB8xx_RAID_XP_3.2.1540.92” to Disk



Step 2: Connect the USB Floppy to the board (The board on the photo is just for reference)




Step 3: BIOS Setup menu select “Advanced\OnChip SATA Type -> AHCI”




Step 4: Setup OS

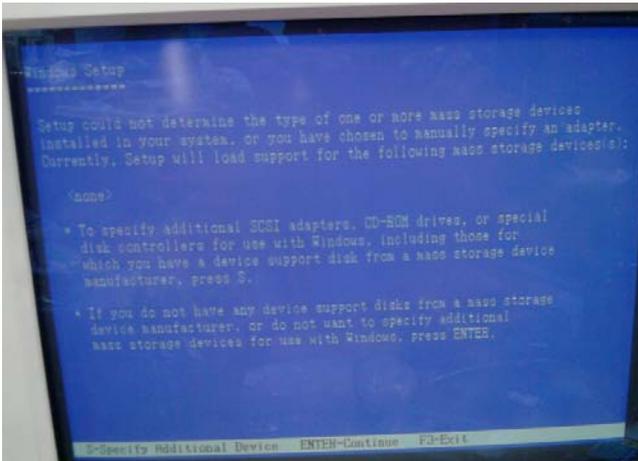

Step 5: Press “F6”**Step 6: Choose “S”**

Step 7: Choose “AMD® A50M”

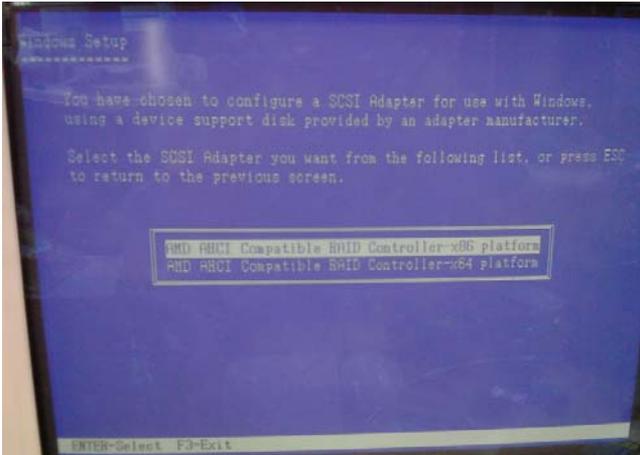

Step 8: It will show the model number you select and then press “ENTER”

Step 9: Setup is loading files



Appendix

E

Electrical Specifications for I/O Ports

E.1 Electrical Specifications for I/O Ports

I/O	Reference	Signal Name	Rate Output
LVDS Inverter / Backlight Connector	CN22	VDD	+5V/2A or +12V/2A
LPC Port	CN1	+3.3VCC	+3.3V/0.5A
CPU FAN	CN3	VDD	+12V/0.5A
Digital IO Port	CN7	D0~D7	+3.3V/(Open drain)
COM Port 2	CN9	+5V/+12V	+5V/1A or +12V/0.5A
USB 2.0 Ports 7	CN12	+5V	
USB 2.0 Ports 8	CN13	+5V	+5V/0.5A (per channel)
USB 2.0 Ports 5	CN14	+5V	
USB 2.0 Ports 6	CN15	+5V	
USB 2.0 Ports 3	CN16	+5V	
USB 2.0 Ports 4	CN17	+5V	
Audio I/O Port	CN18	+5V	+5V/1A
+5V Output for SATA HDD	CN21	+5V	+5V/1A
LVDS Port	CN23	VCC	+3.3V/1A or +5V/1A
USB Ports 1 and 2	CN27	VCC	+5V/1A (per channel)
PS/2 Keyboard/Mouse Combo Port	CN29	+5V	+5V/1A
VGA Port	CN30	+5V	+5V/1A (reserved) +5V/0.5A
CFast Slot	CFDA1	+3.3V	+3.3V/0.5A

SubCompact Board**GENE-HD05**

Mini-Card Slot	PCIEA1	+3.3VSB +1.5V	+3.3V/1.1A +1.5V/0.375A
----------------	--------	------------------	----------------------------